



AHD MDVR QUICK USER GUIDE

ACCESSORIES

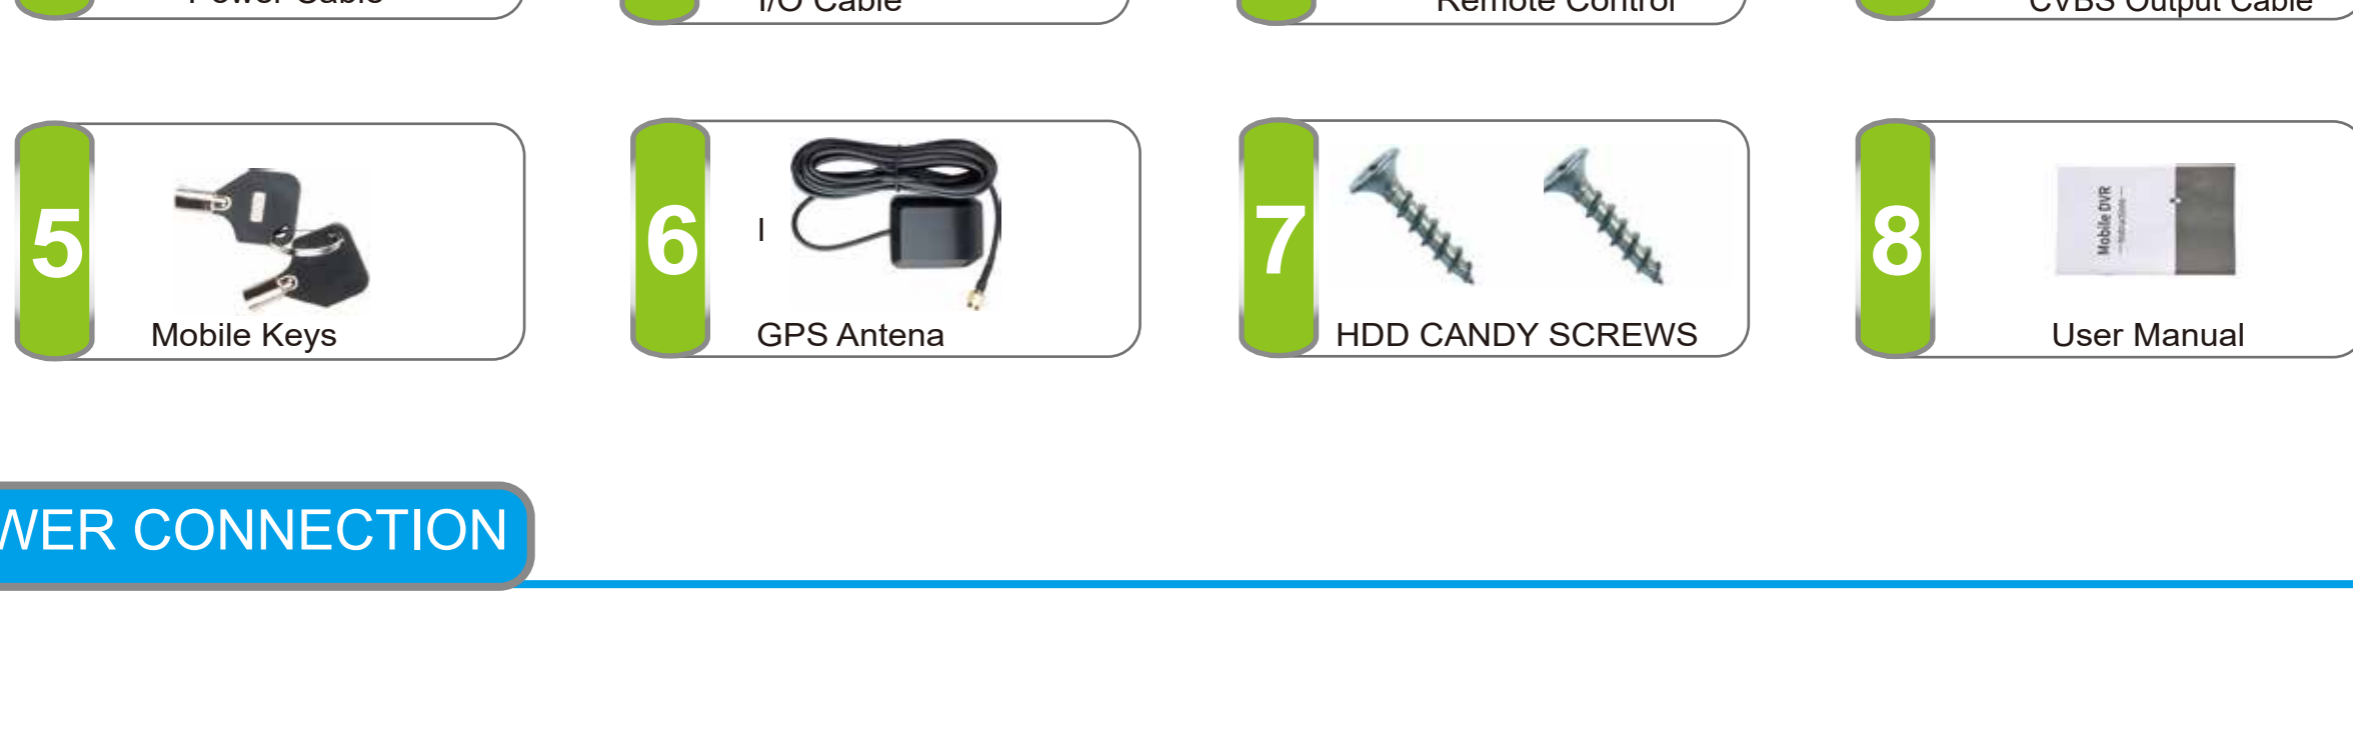

POWER CONNECTION

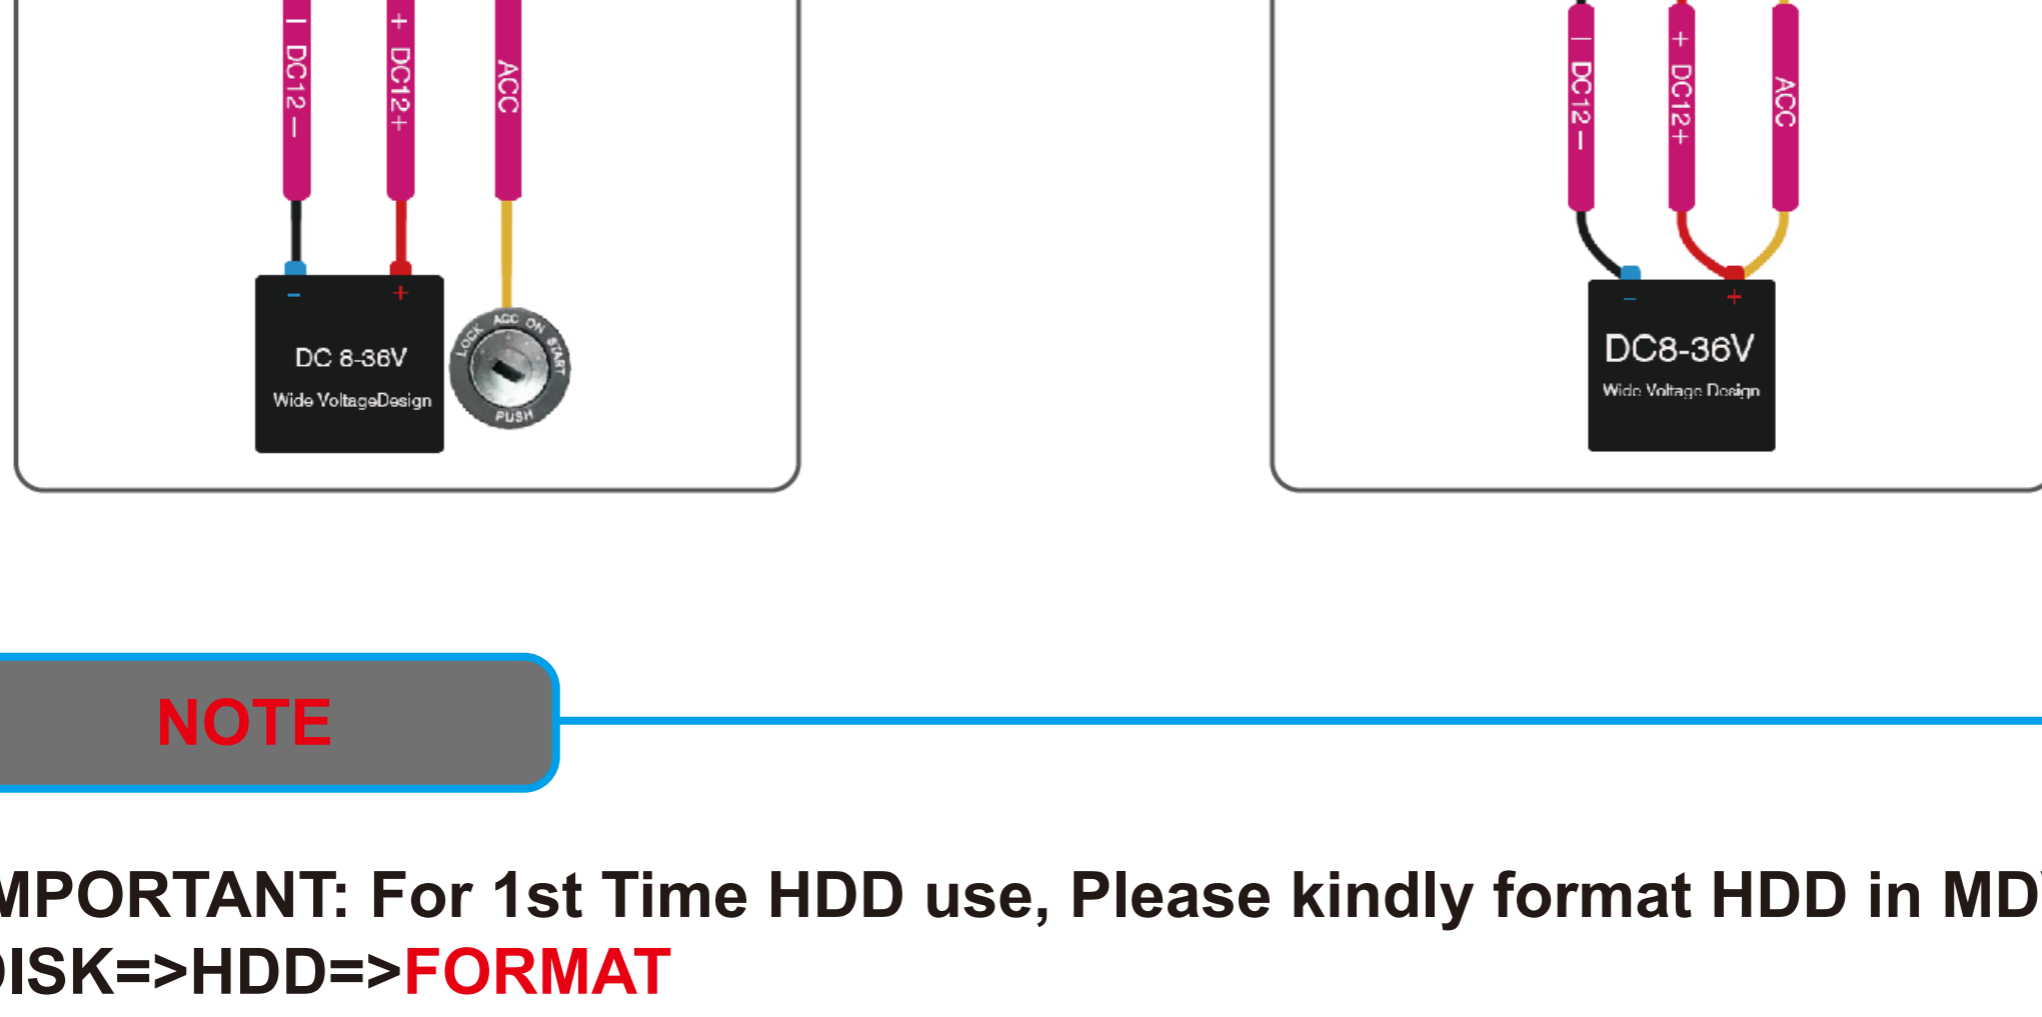

NOTE


IMPORTANT: For 1st Time HDD use, Please kindly format HDD in MDVR at first.

DISK=>HDD=>FORMAT





CONTROL BAR

After Start MDVR, See MDVR UI like the Picture below

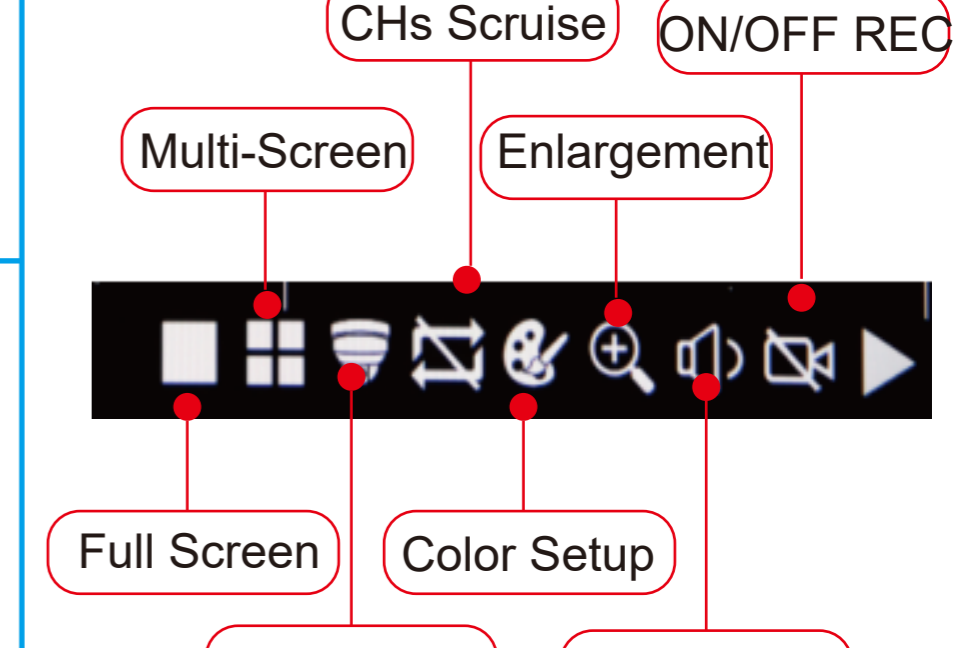


ENLARGEMENT

Click Enlarge button, and Drag Mouse to select a special area to auto enlarge.

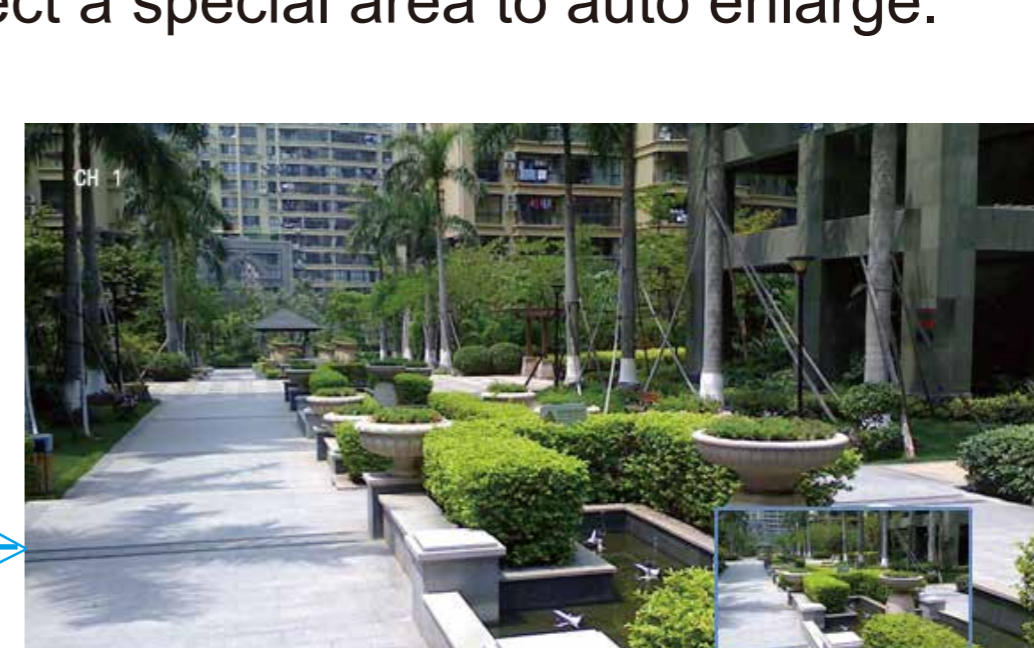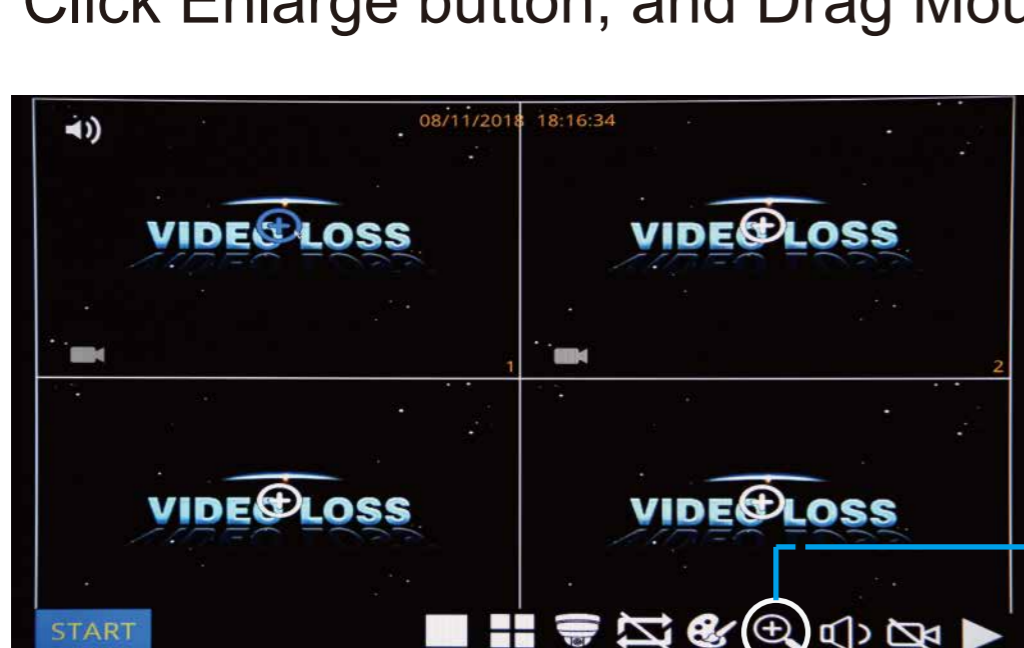

PLAYBACK



Step-01: Login MDVR Menu, User Name: admin, Password: Null (No Password)

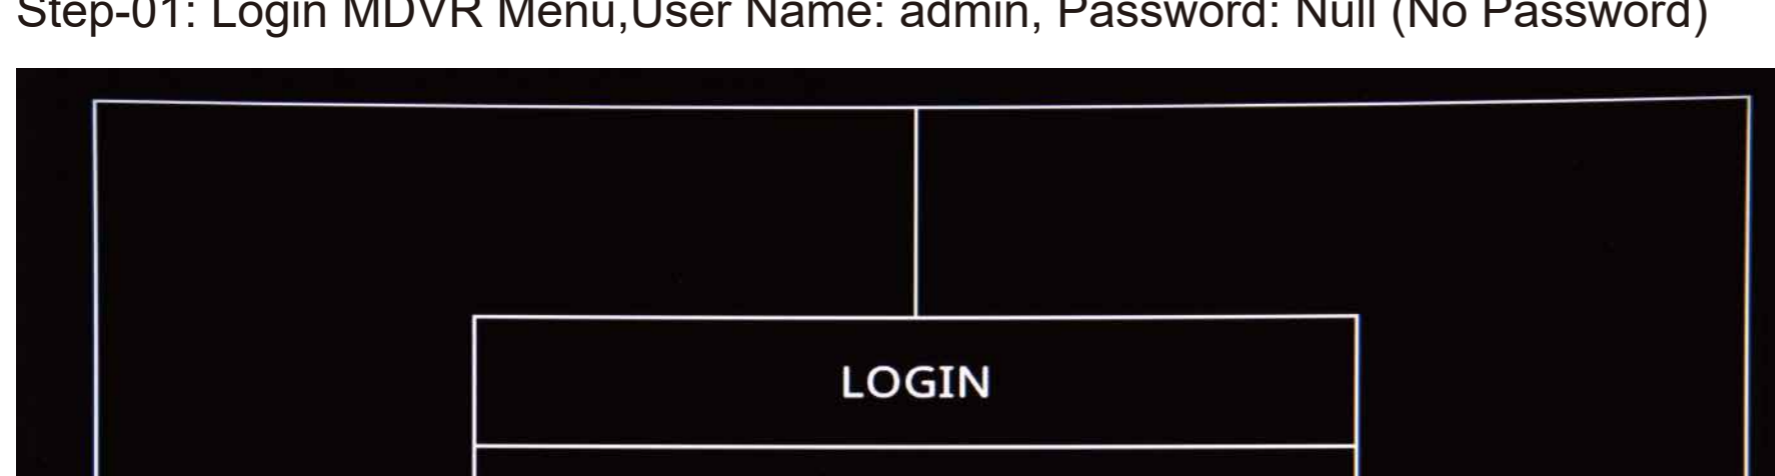


Step-02: Login "Search"=>Setup Playback time & CHs=> Search Out Video files, Like the Picture belows:



Step-03: Check Video File=> Click "Playback"=>Choose the Playback CHs (Max 4-CH)=> Click "Playback"

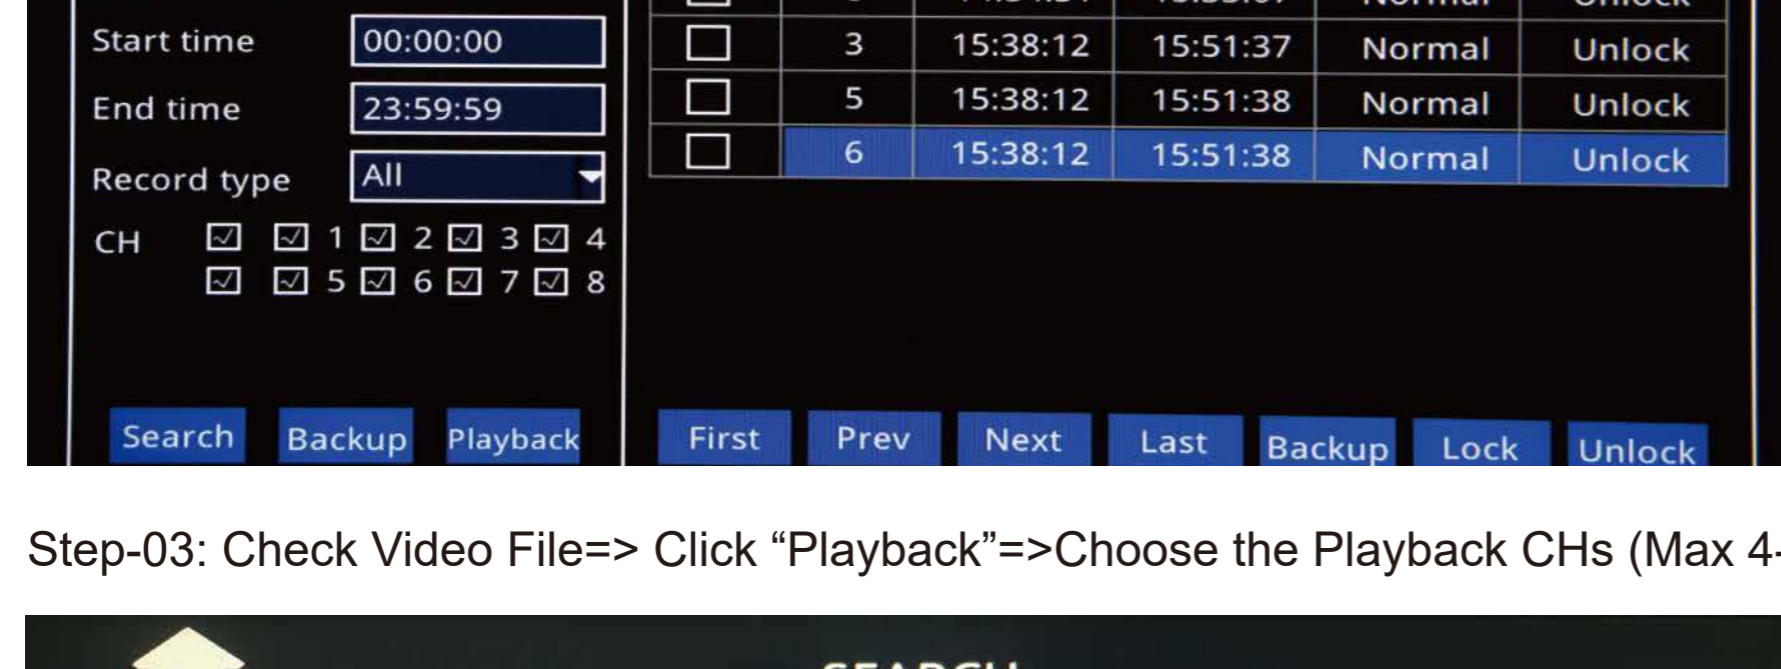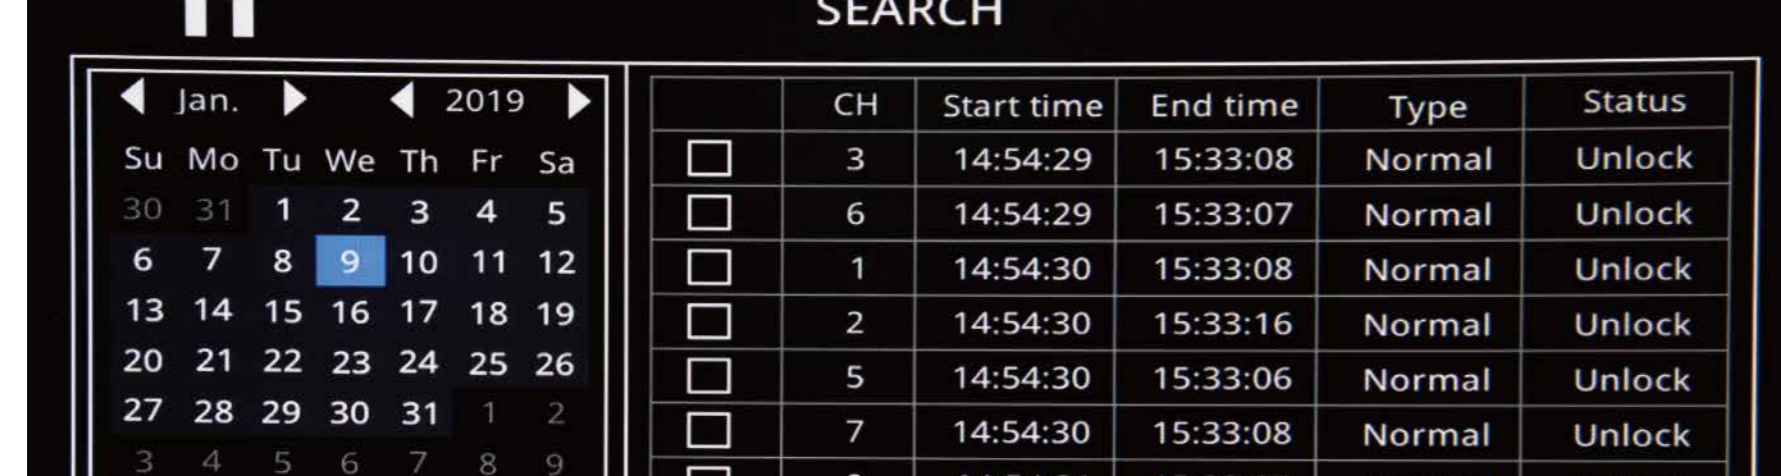


CONTROL BAR

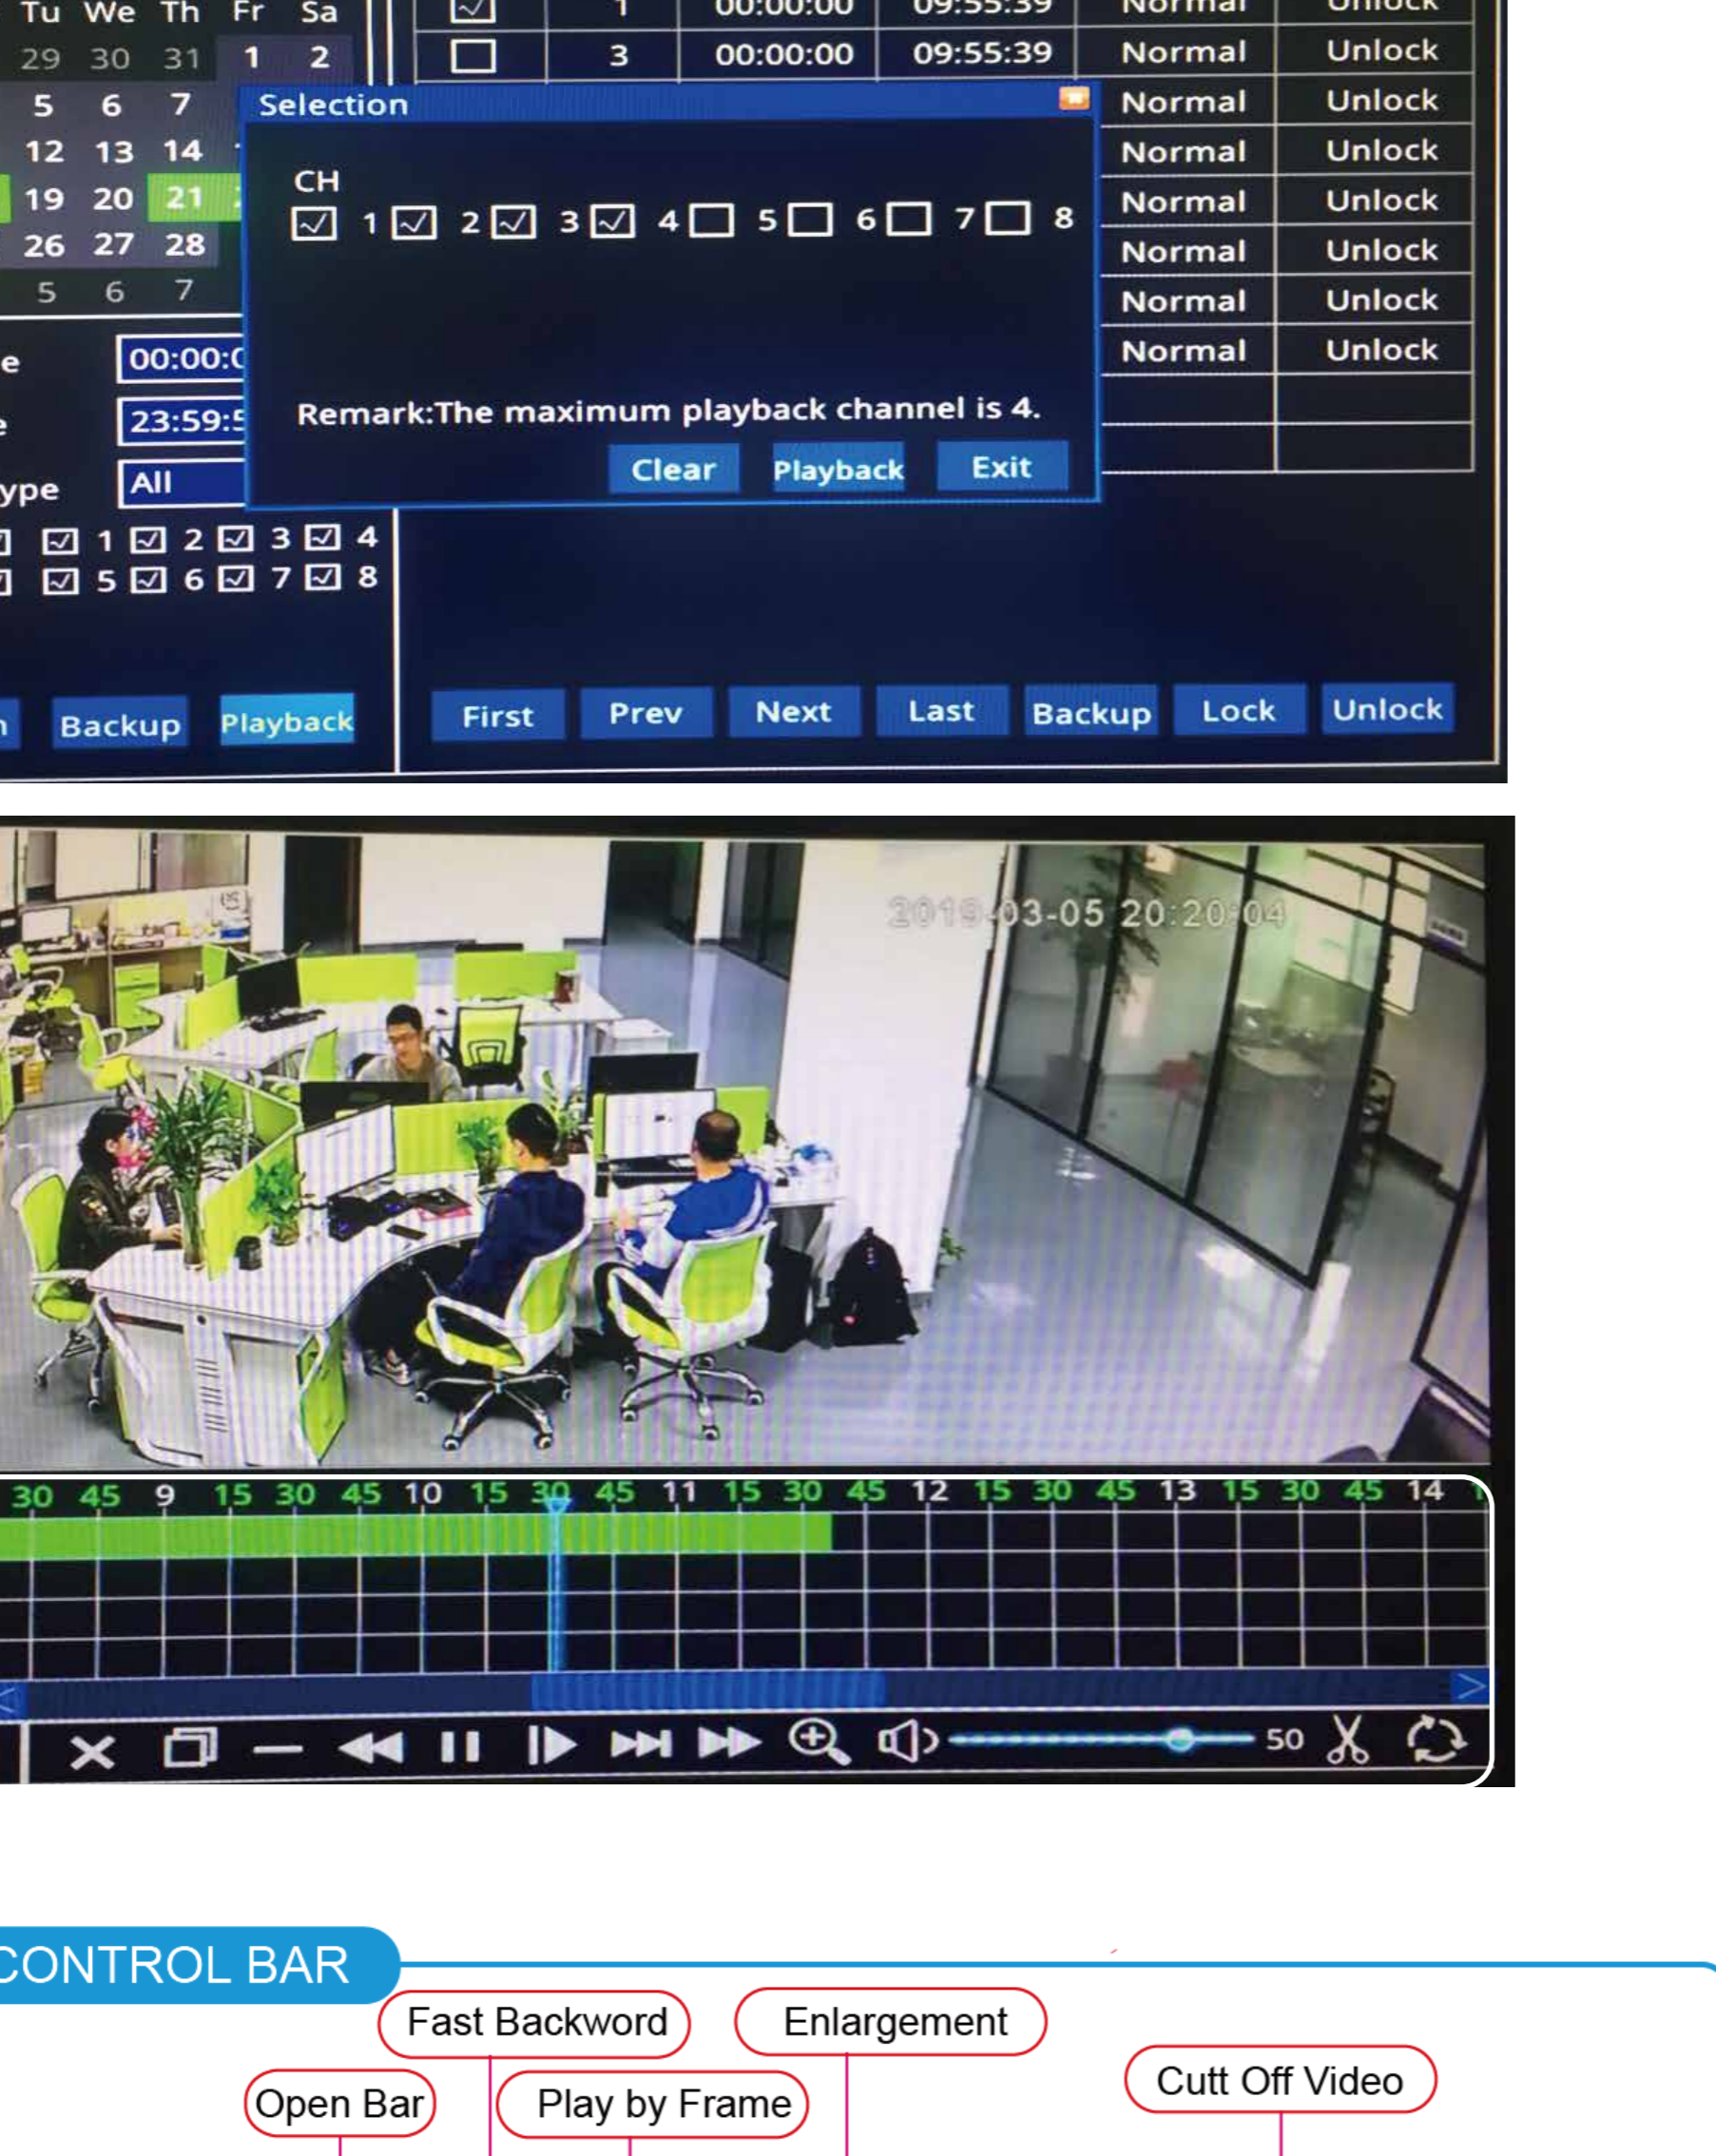


AVI VIDEO BACKUP


Step-01: Insert U-Disk into Computer and Format by Fat32

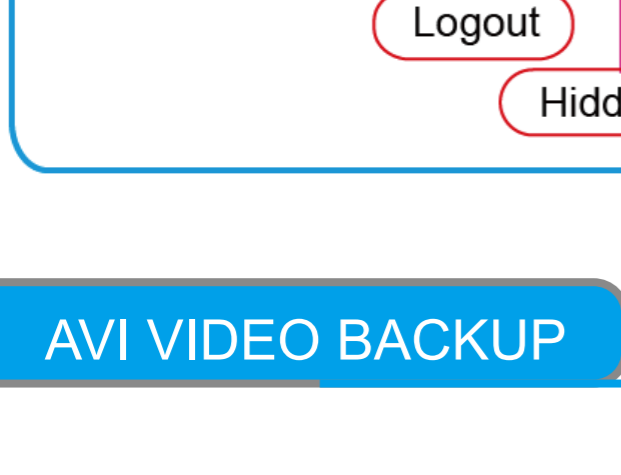

Step-02: Insert U-Disk or External HDD into MDVR Via USB Port

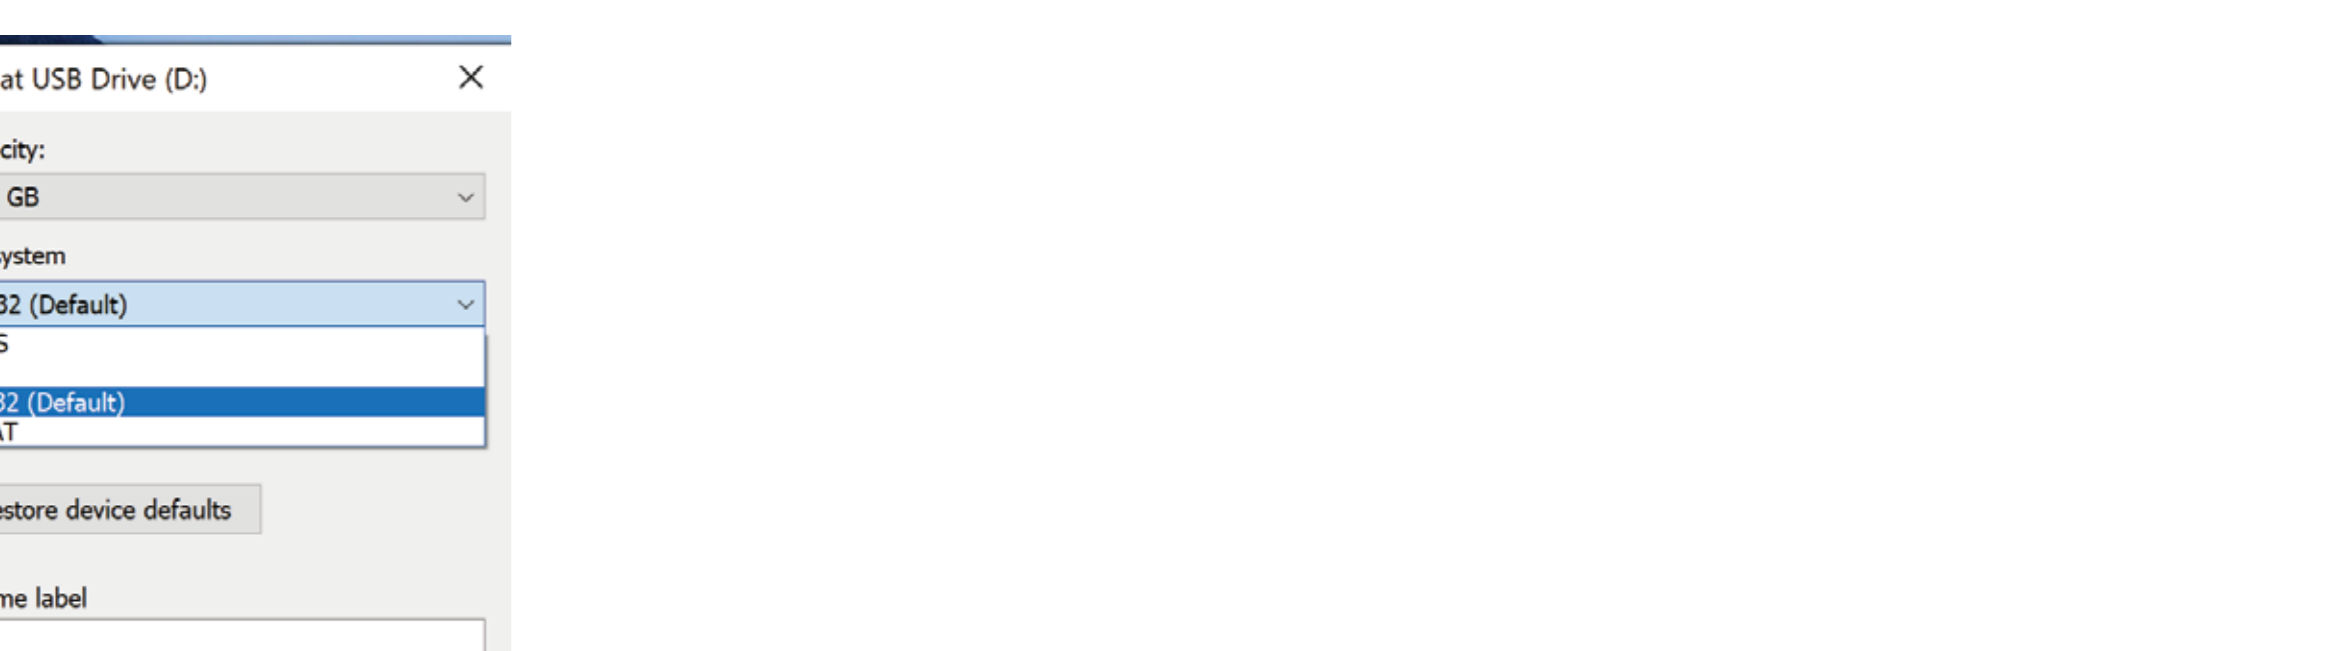

Step-03: "Search"=>Search Out Recorded videos

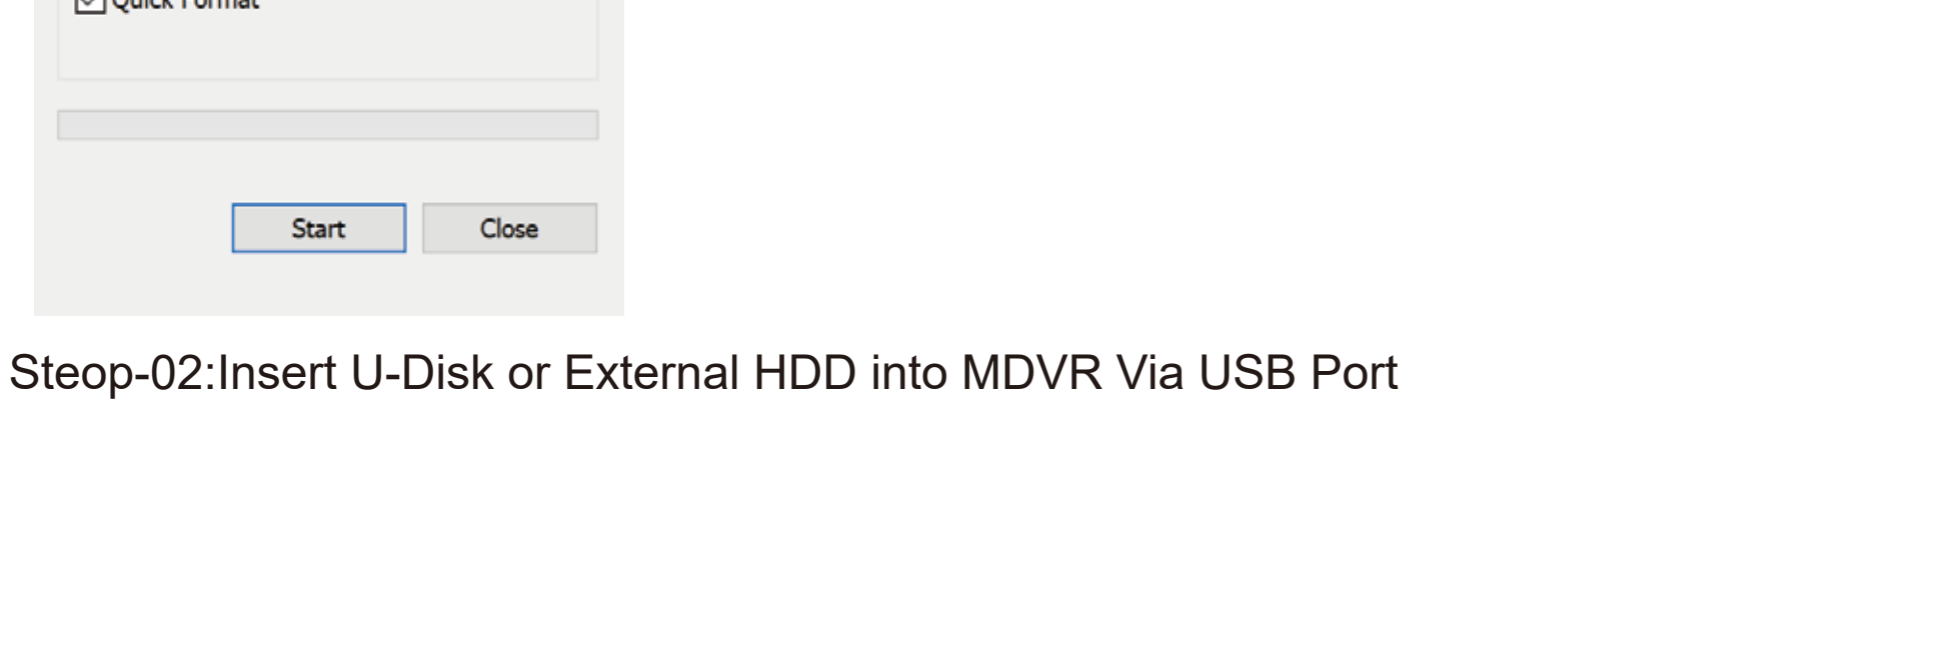


Step-04: Check Video Clip=> Click BackUp Button




IPC Camera Setup

Step-01: Log in MDVR Menu, "Network"=>"Network"=>"LAN" To Setup The Segment of LAN IP to be The same as that of IPC

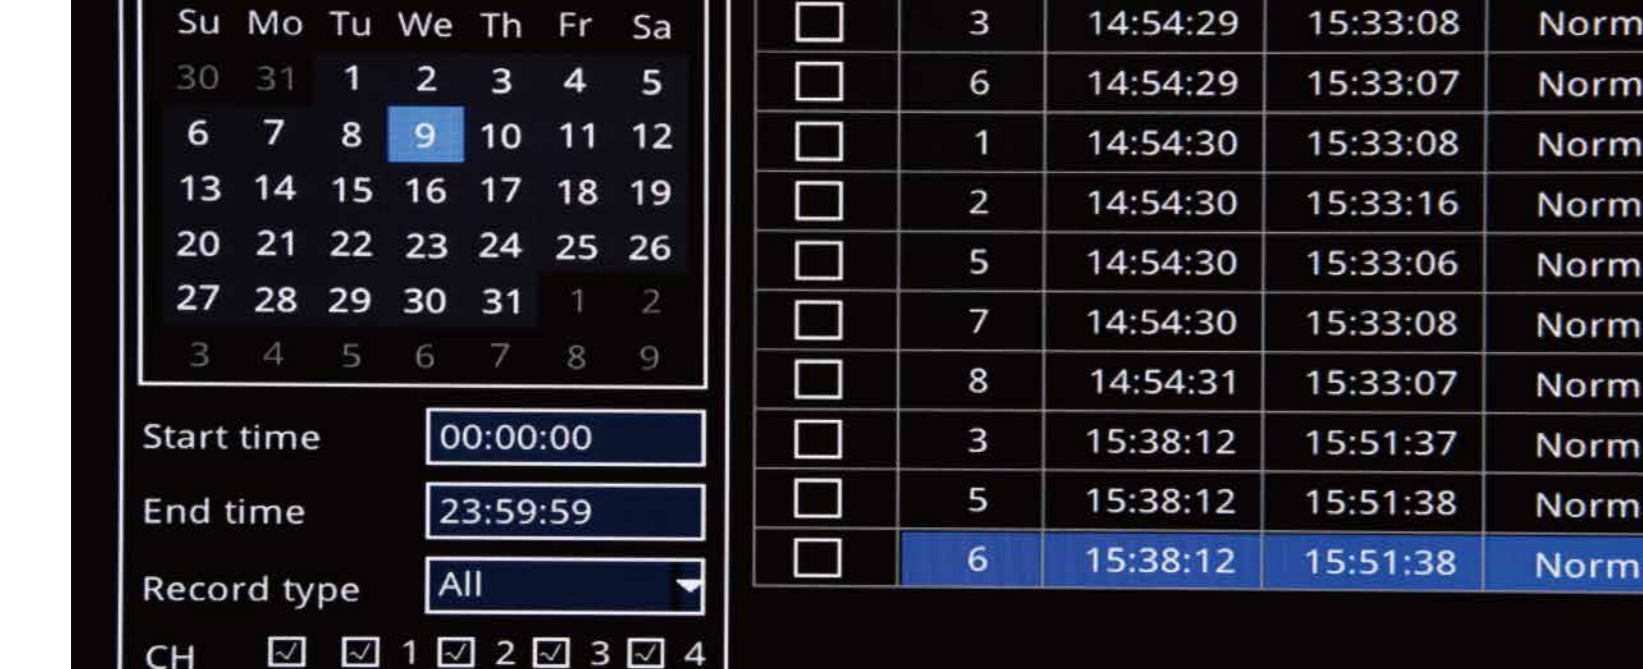

Note
You can use "Obtain an IP address automatically" or "Setup an IP by manual." The More important is that the IP address of MDVR must have the same Segment as that of IPC Cam address.
For Example, The IP address of IPC cam is 192.168.1.101, the Segment is 1, so the MDVR IPC also must be 1 Segment, like xxx.xxx.1.xxx

Step-02: IPC Setup, Login MDVR Menu, "Network"=>"Network"=>"IPC" => "Enable"(Default)=> Click Search "

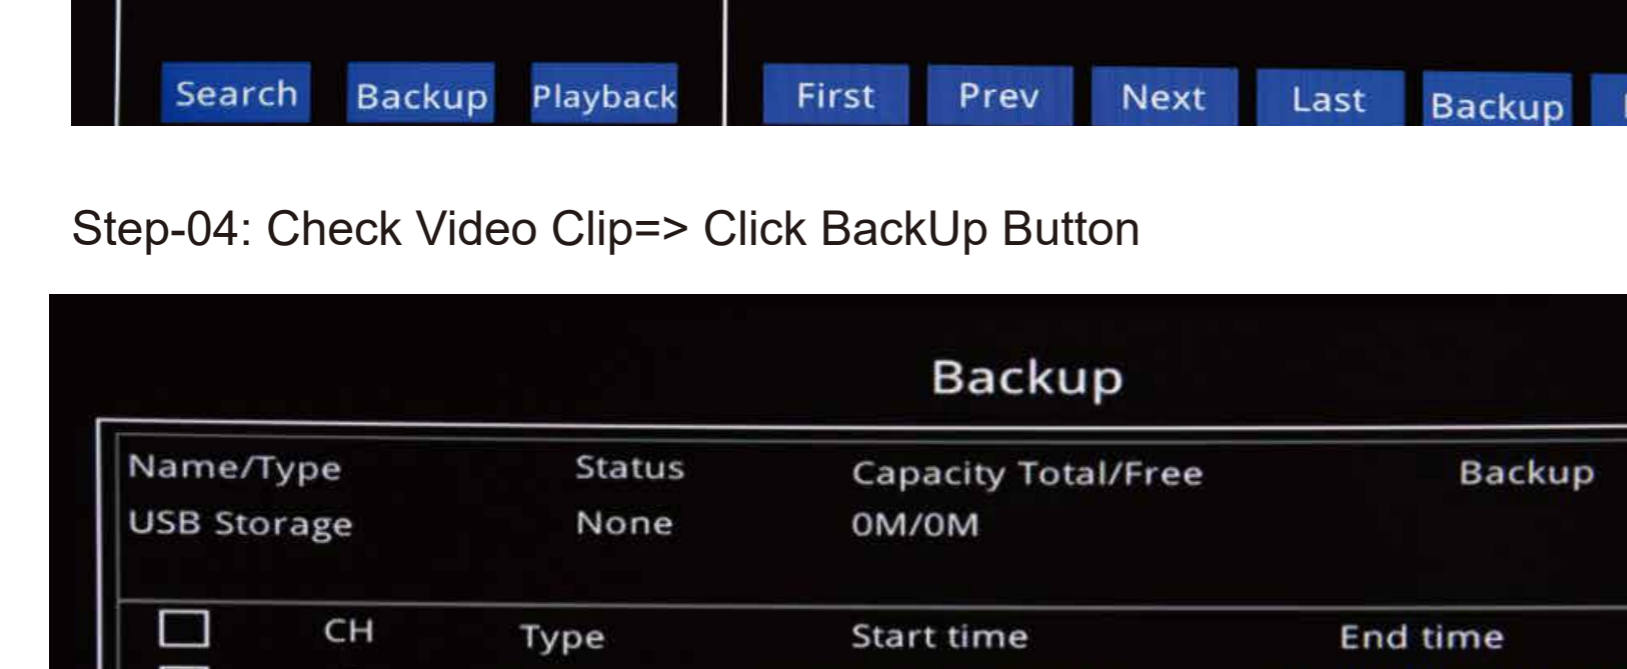

Step-03: 3th Step: After Search out the IPC Address, Check The IPC Address=>"OK"=> "Apply"=>done=> Video will show



MOTION DETECTION


Step-01: Login MDVR GUI=>"Basic"=>"Record"=>Mode: Scheduel




Always Mode

Schedule Mode


Step-02: Come into "Schedule"=> Setup "Alarm" Time in Red

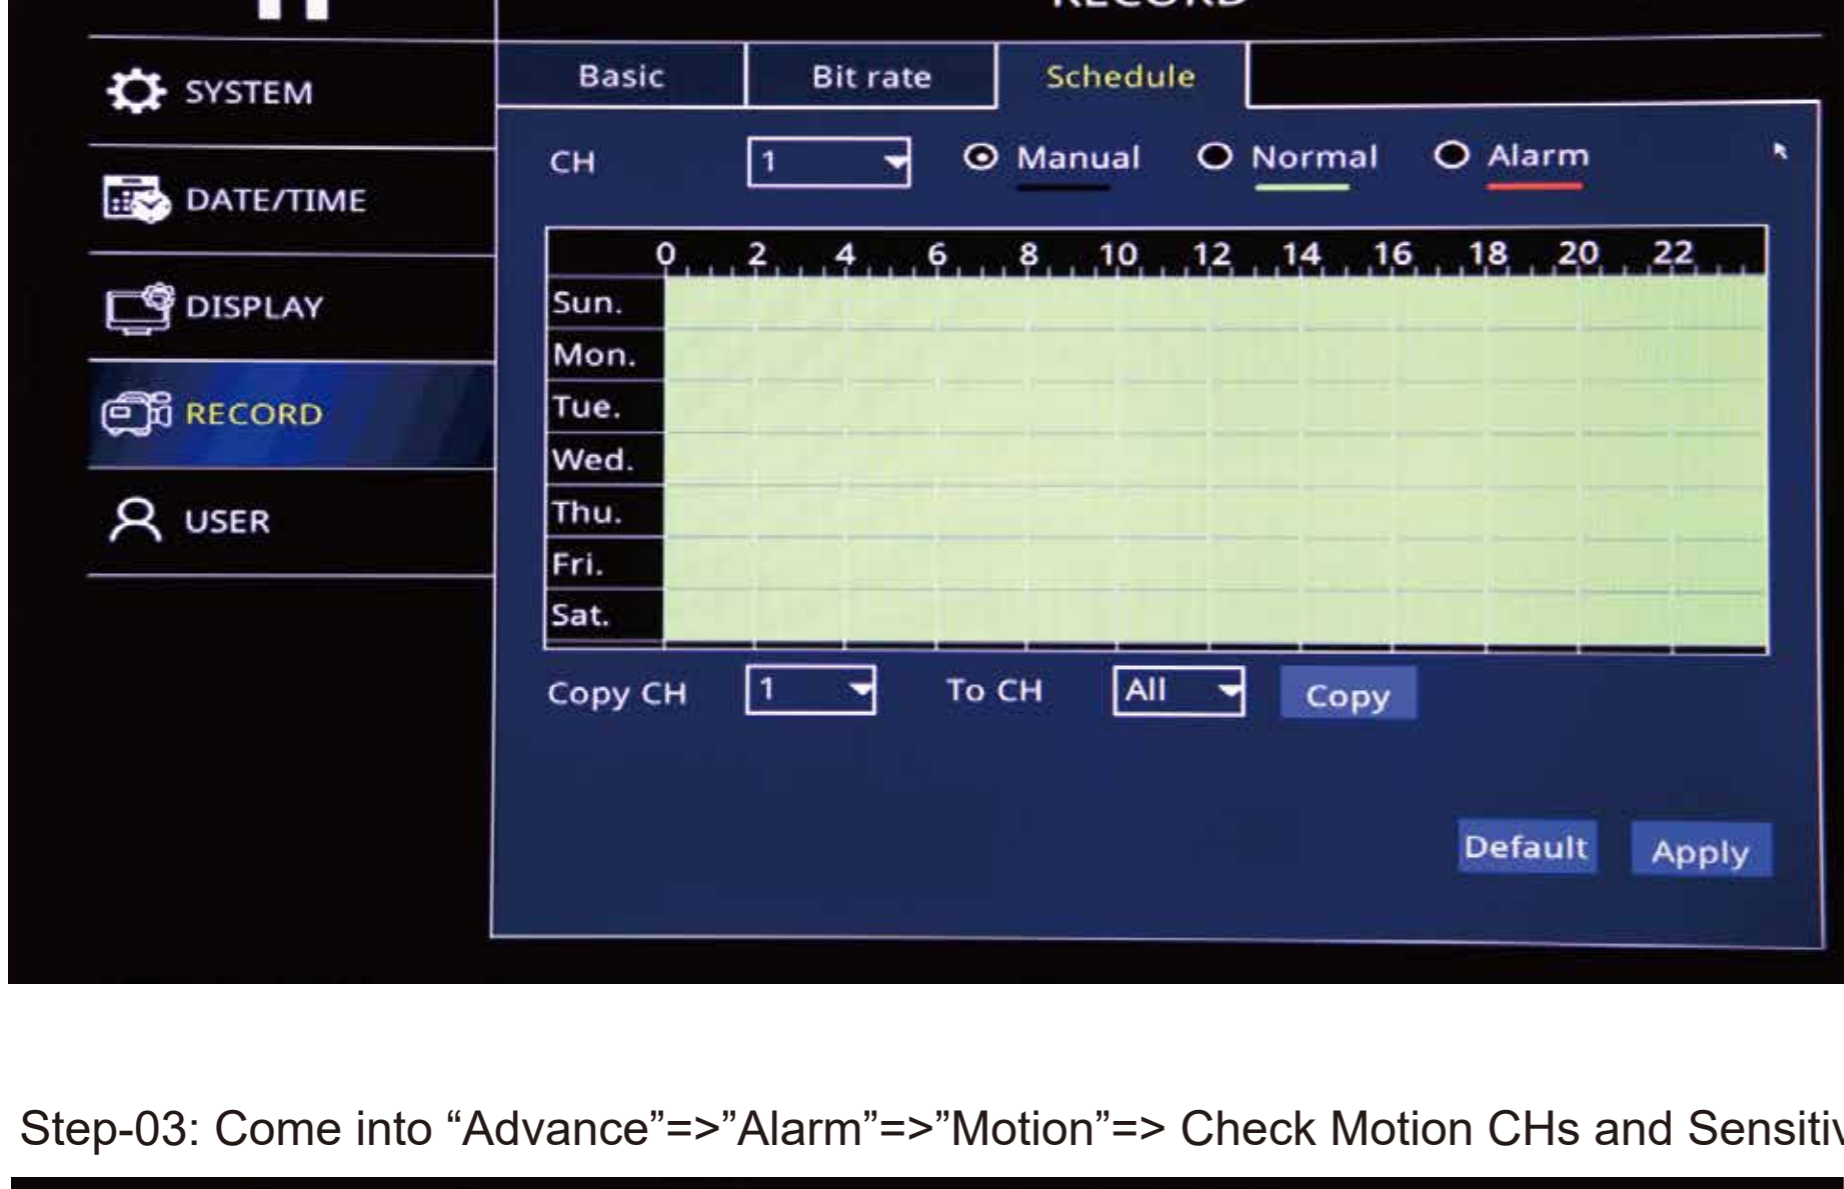

Step-03: Come into "Advance"=>"Alarm"=>"Motion"=> Check Motion CHs and Sensitivity (1=Highest)

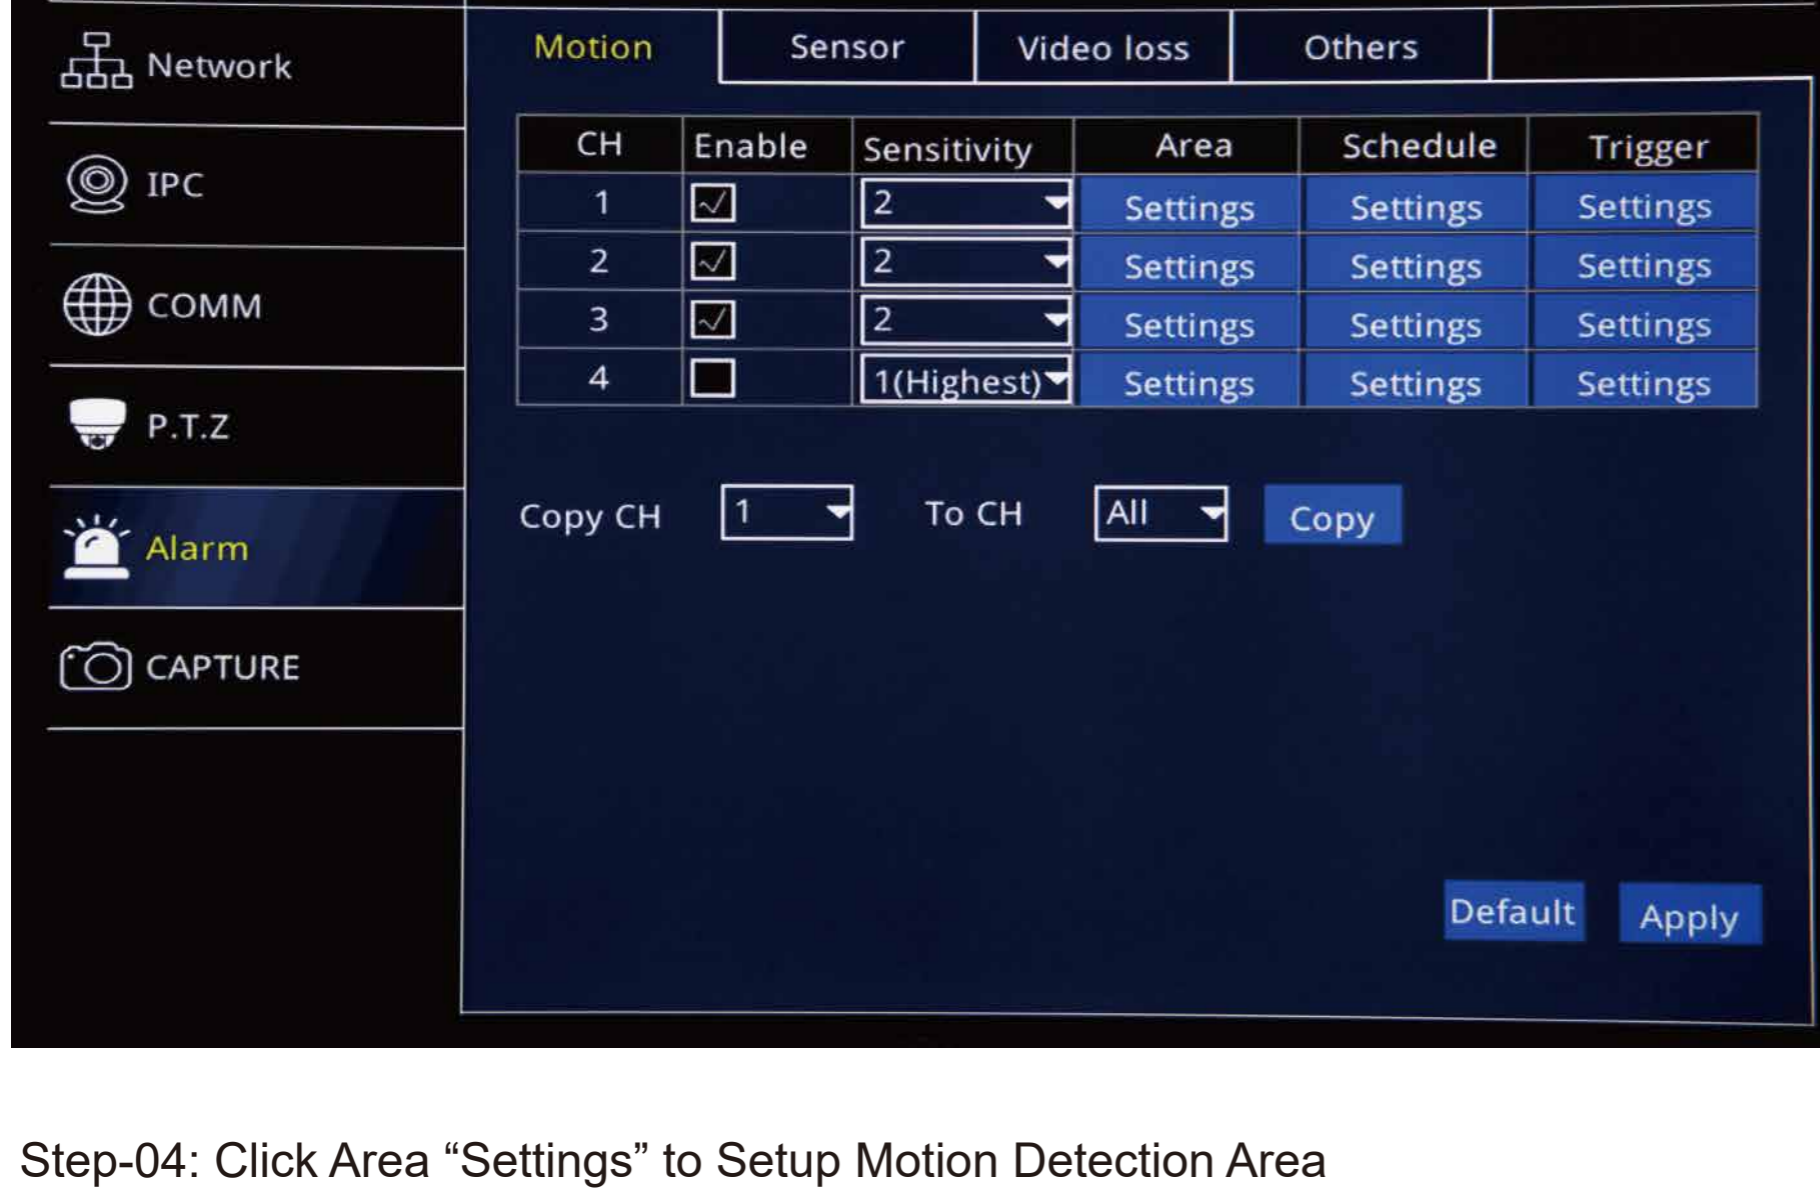

Step-04: Click Area "Settings" to Setup Motion Detection Area

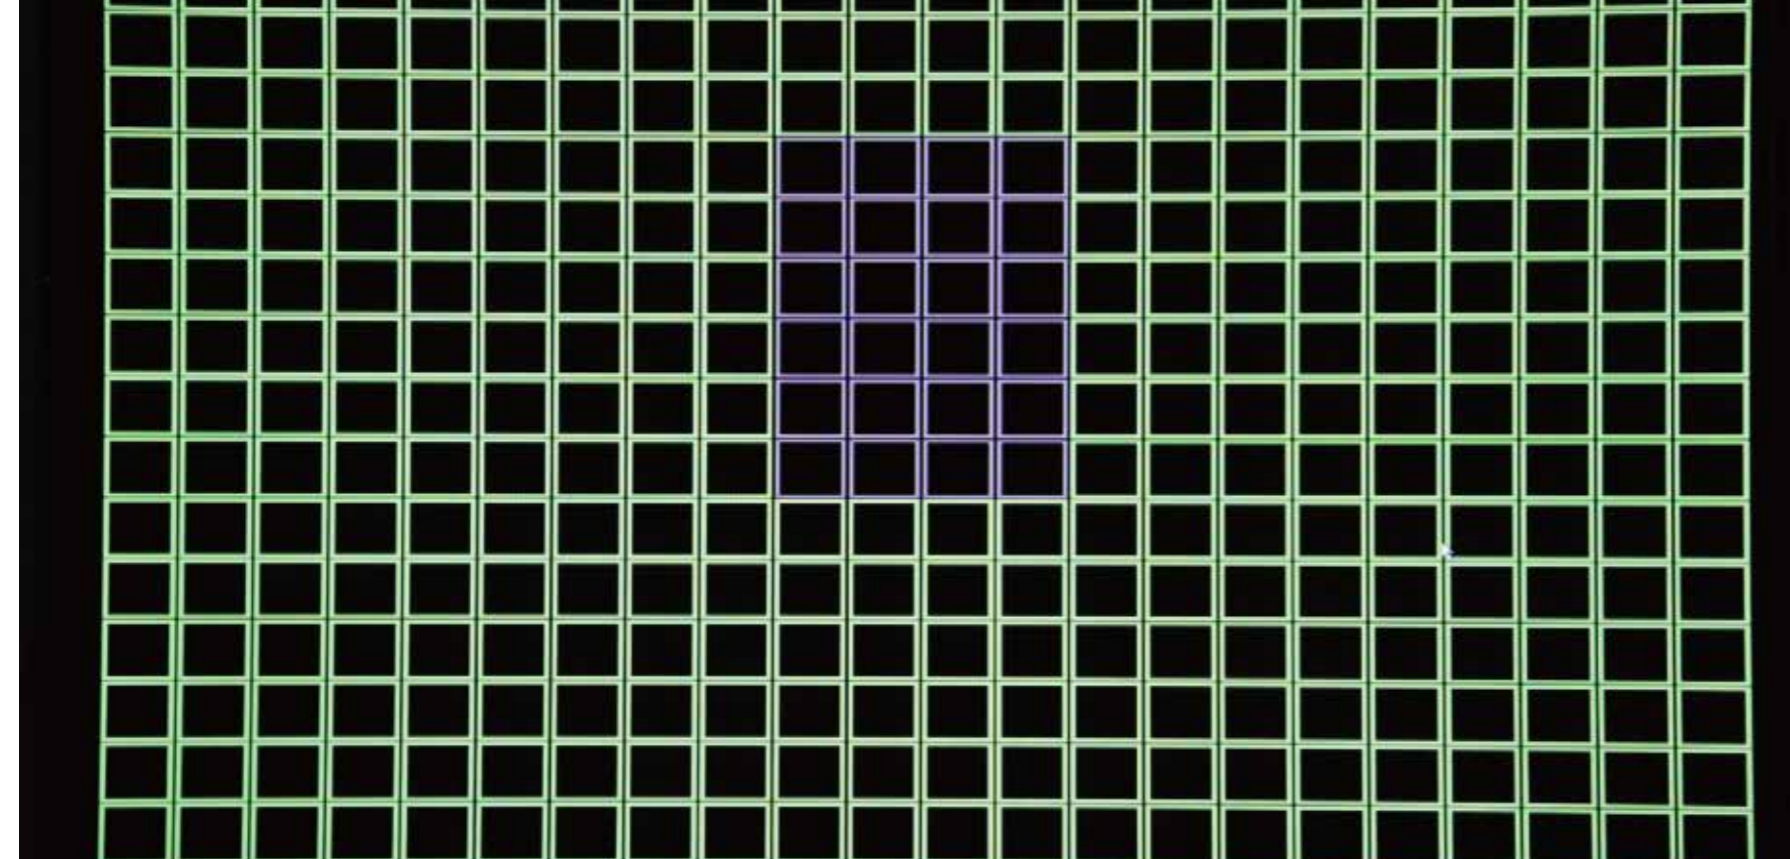

NOTE


MOTION AREA COLOR



NO-MOTION AREA COLOR



Step-05: Click Trigger"Settings" to Setup Alarm linkage function

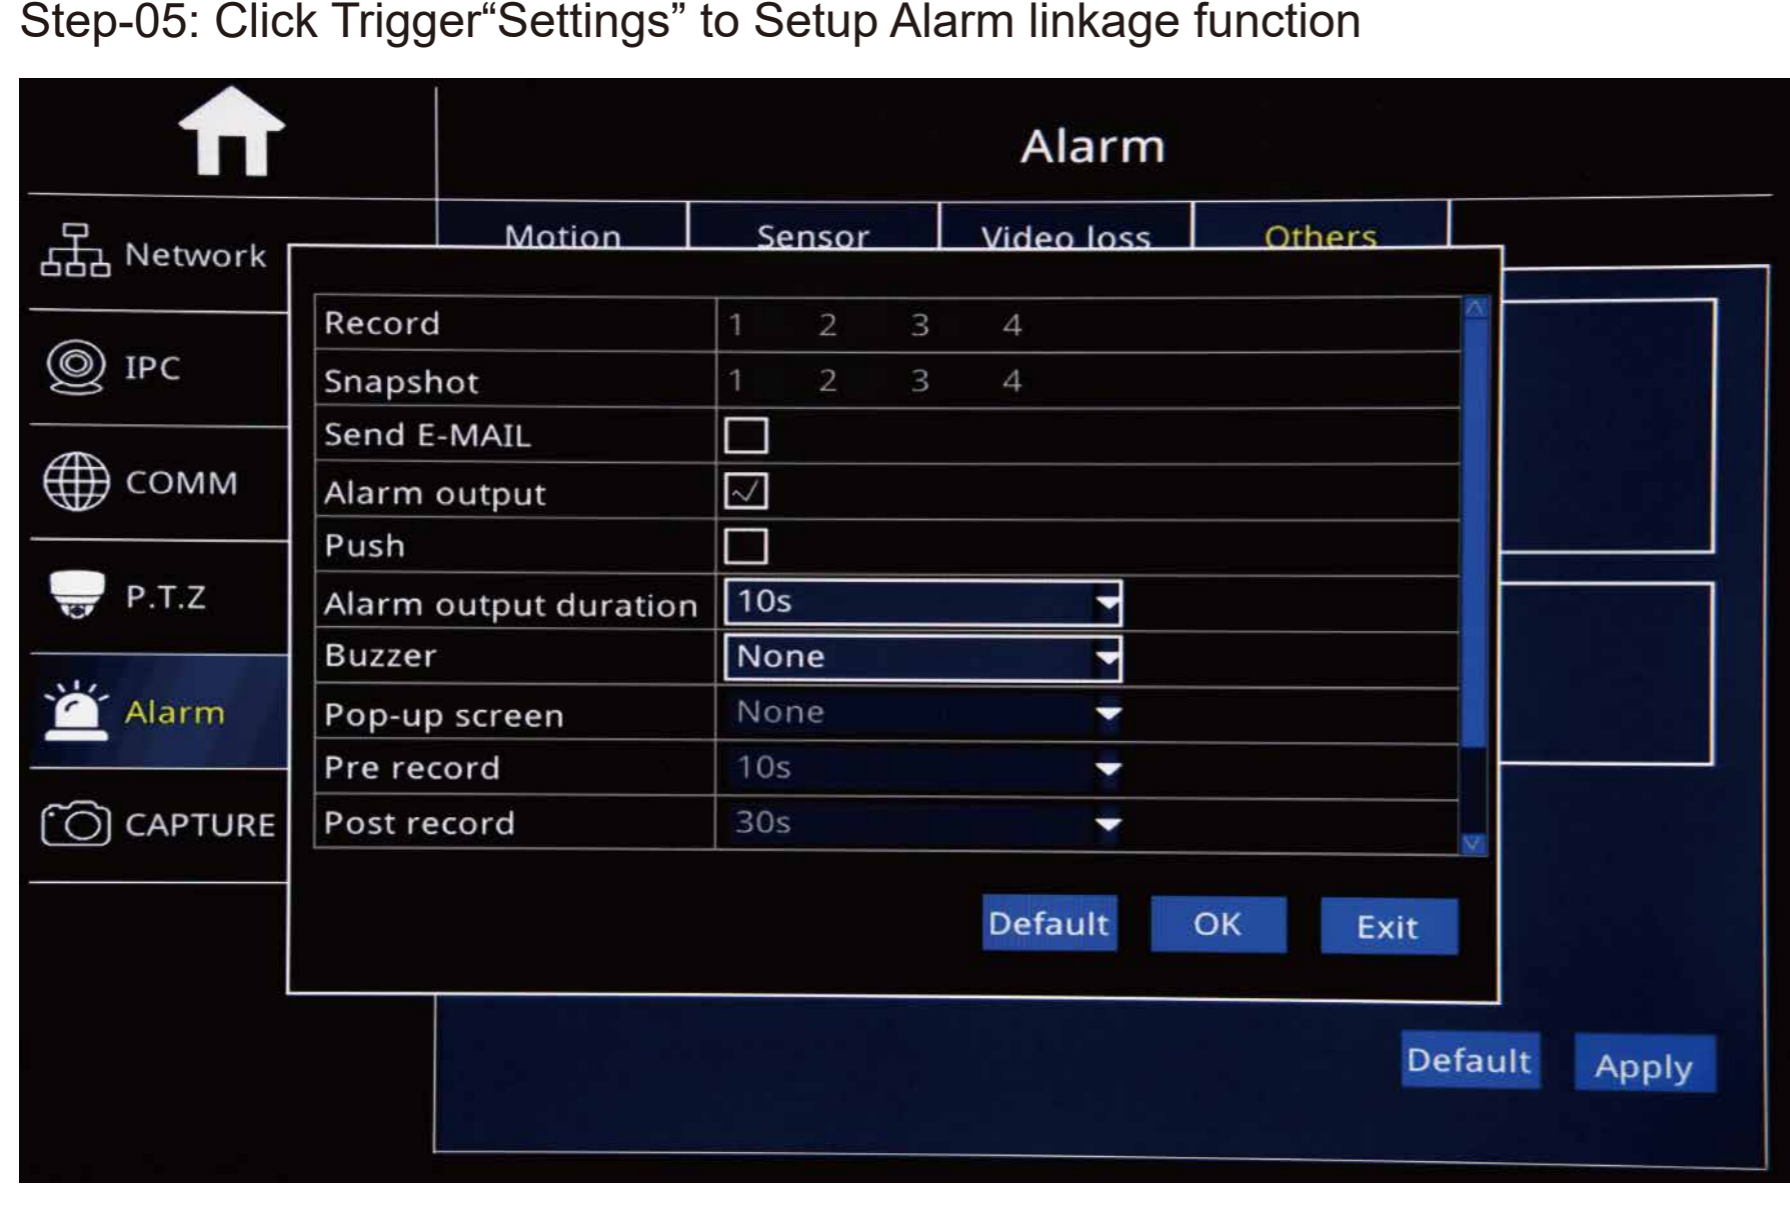

DST TIME SETUP

Login MDVR Menu=>"Basic"=>"Date/Time"=>"DST" To Setup DST Time



RECORD SETUP


Step-01:Login MDVR Menu=>"Basic"=>"RECORD"=>"BASIC" To Settle Channels & Audio Setup



Step-02: Login "Bit Rate"=>Setup Record Stream




Step-03: Login "Schedule"=>Setup Alarm Record & Manual Record Mode

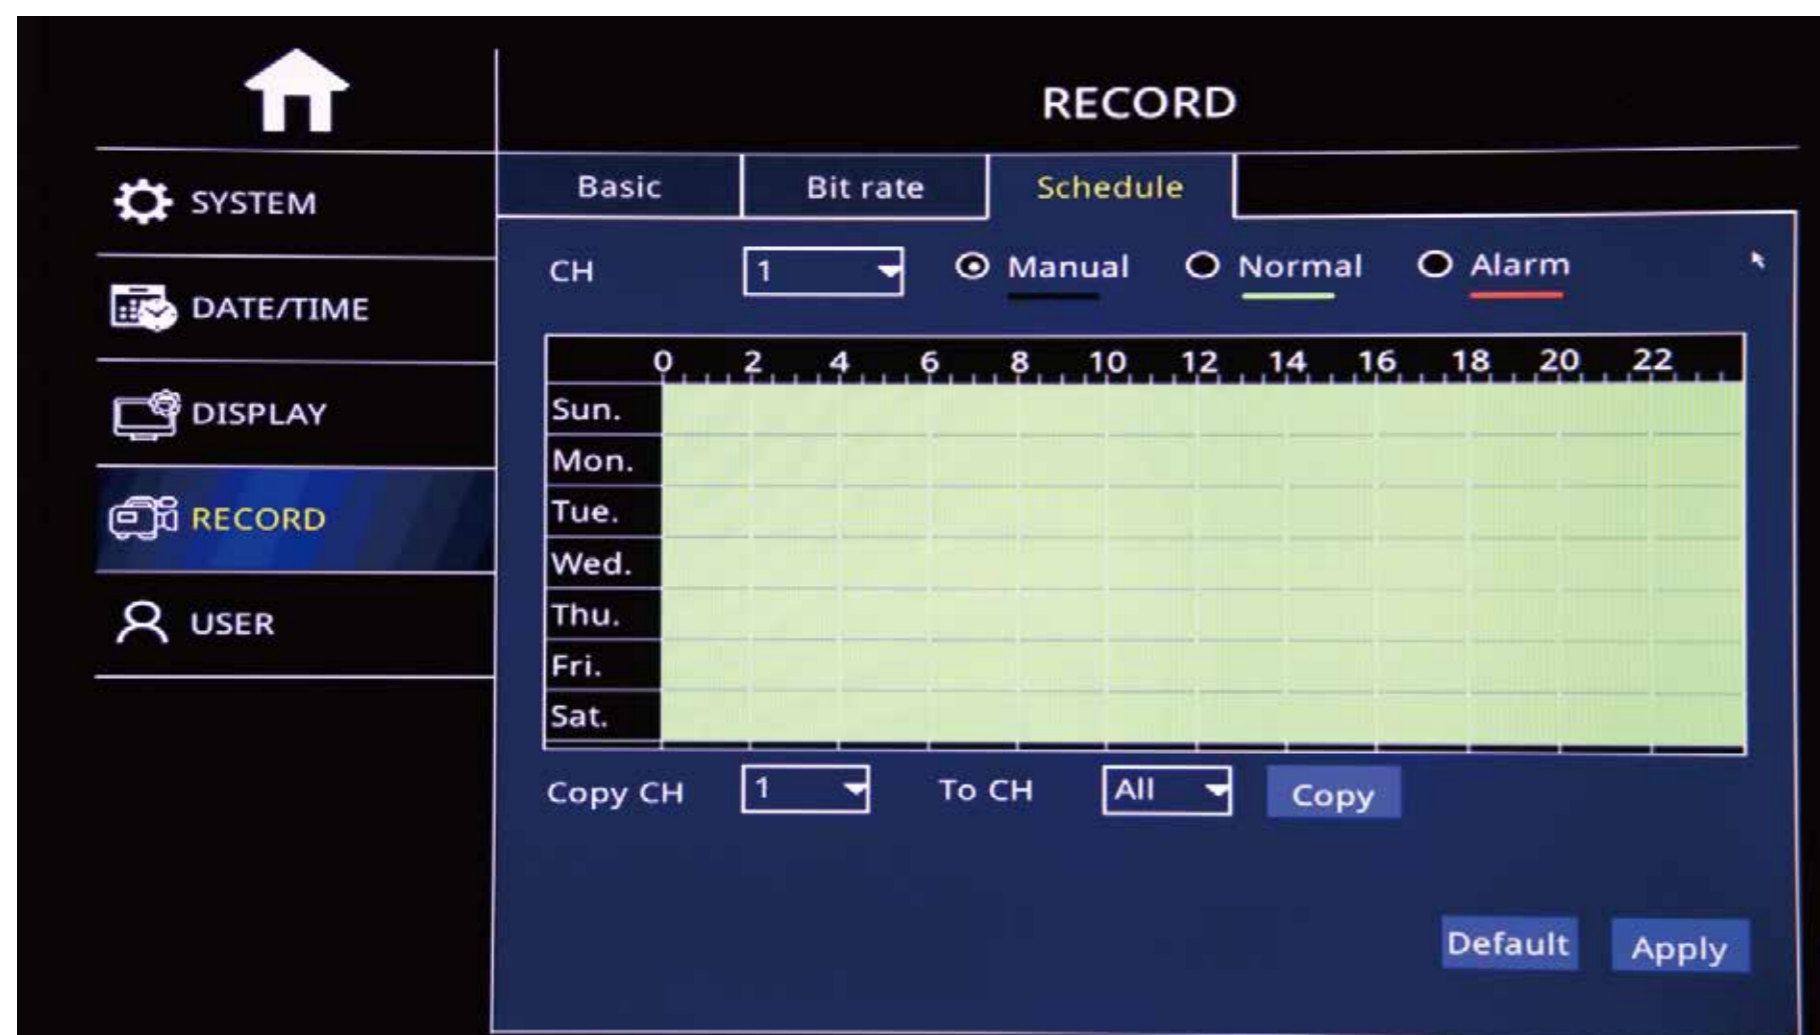

4G/WIFI Setup


Step-01:Login MDVR Menu=>"ADVANCE"=>"NETWORK"=>"WIFI"=>"Enable" to auto search out WIFI SSID=>Click the WIFI

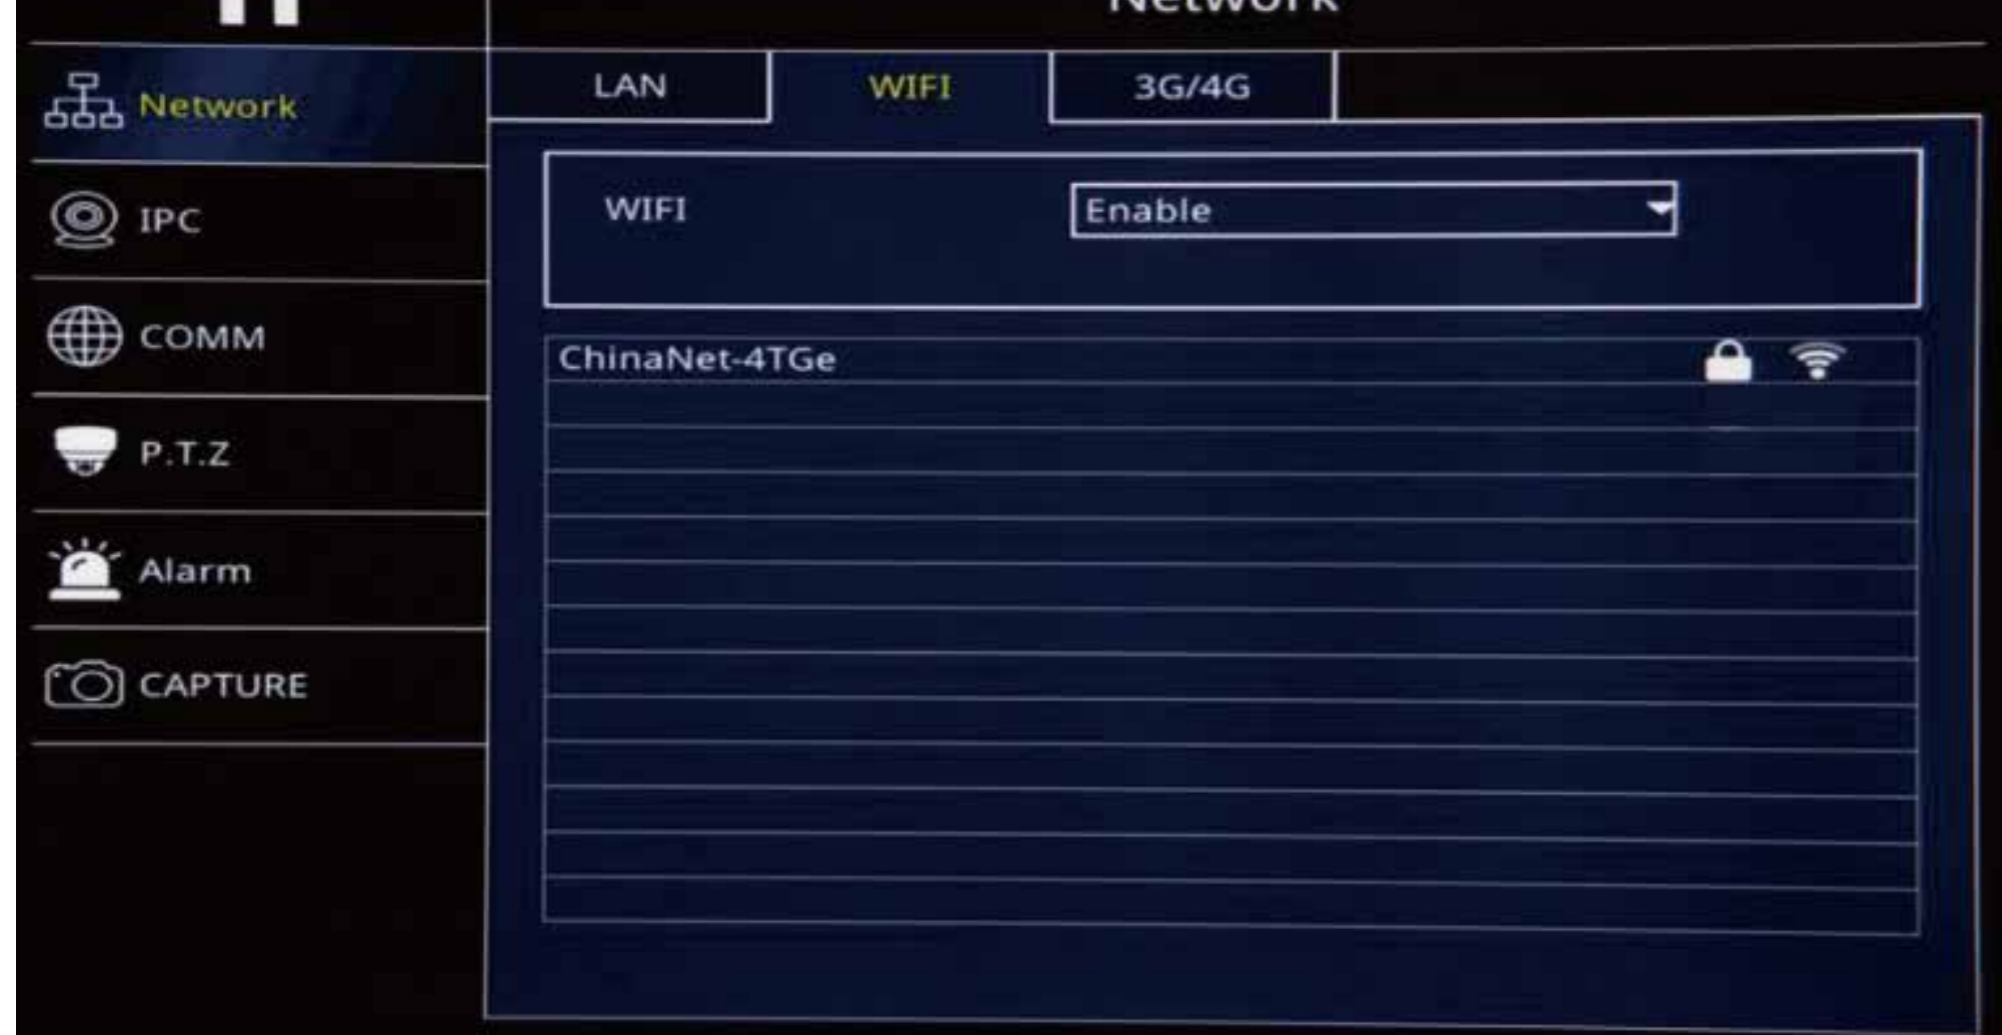

Step-02:After WIFI Setup=>"3G/4G"=>"Switch: Enable"=>"Mode:Manual"=> Input "APN"=> "Access Number:"99#"



Step-03: After Setup, "Net" Led On and Press "Info" Button to check network connection Status, If All success, the device already connected with Server and can login CMSV6 to see the live video.

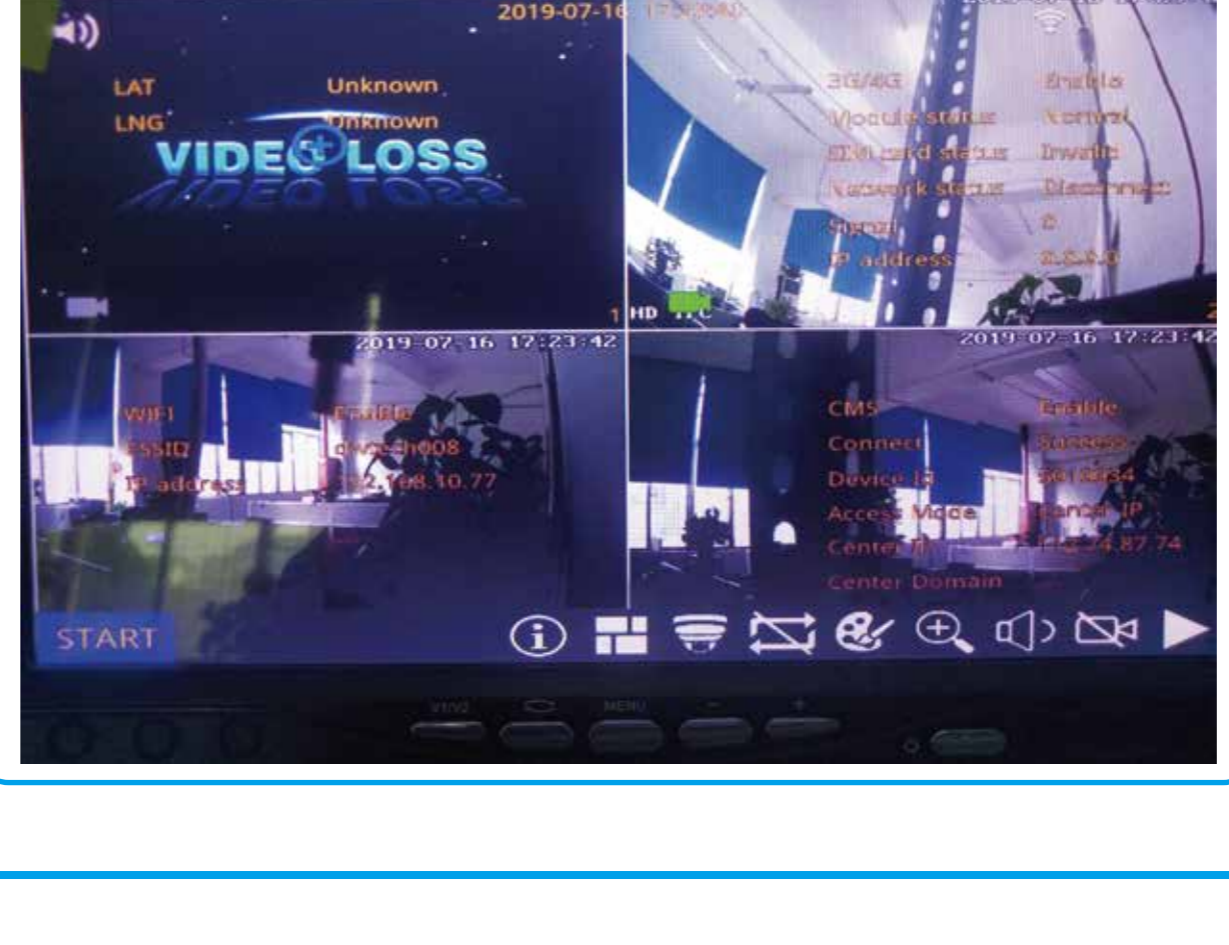

NOTE

If connect with Customer Server, Please kindly Login MDVR Menu=>"ADVANCE"=>"COMM"=>"CMS" To Change Server IP,Device ID and Port

