Mobile DVR User Manual ——*SAFE DRIVING*



MDVR/MNVR Brief User Manual

CONTENT

- Specification
 Power Connection
 Control Bar Introduction
 AVI Back UP Introduction
 DST Time Setup
 4G/WIFI Network Setup
- 2.Accessories4.MDVR Installation Guide6.Playback Introduction8.Motion Detection10.Record Setup12.Alarm Email Setup

SPEFEIFICATION

4-CH/8-CH AHD Mobile DVR

4-CH HDD Mobile NVR

Items	Parameter	Performance	Performance		Parameter	Performance
	Chipset	Hi3520DV300			Chipset	Hi3520DV300
	System	Linux			System	Linux
System	Language	Chinese/English/Rus	sia etc	System	Language	Chinese/English/Russia etc
	Interface	Visual GUI,Support N	Visual GUI,Support Mouse		Interface	Visual GUI,Support Mouse
	Account Management	Admin/Sub-User mar	nagement		Account Management	Admin/Sub-User management
	Video Standard	PAL/NTSC			Video Standard	PAL/NTSC
	Video Input 4-CH AHD Input 8-CH AHD Input		Video Input	4-CH IPC Input,Built-in POE Switch		
	Resolution	1080P/720P	1080N/720P		Resolution	1080P/720P
Record	Video Ouput	1-CH CVBS + 1-CH	VGA Output	Record	Video Ouput	1-CH CVBS + 1-CH VGA Output
	Image Quality	0-7 levels adjustable	e (0 is the best)		Image Quality	0-7 levels adjustable (0 is the best)
	Recording Mode	Boot up/Manual/Sch	edule/Alarm Record		Recording Mode	Boot up/Manual/Schedule/Alarm Record
	Motion detection	Support			Motion detection	Support
	Audio Input	4-CH/8-CH Audio in	put		Audio Input	4-CH Audio input
	Audio recording	Audio & Video synch	hronized recording		Audio recording	Audio & Video synchronized recording
Audio	Audio Compression	G.726		Audio	Audio Compression	G.726
	Audio Output	1-CH Audio Output			Audio Output	1-CH Audio Output
Mode	Mode	Playback by Time/File/Channel/Event			Mode	Playback by Time/File/Channel/Event
Playback	Playback Channel	4-CH Local Playback	4-CH Local Playback		Playback Channel	4-CH Local Playback
	1-CH USB 2.0 For		louse or Upgrade			1-CH USB 2.0 For Mouse or Upgrade
Interface	USB Port	Extendable 2-CH RS232 & 2-CH RS485		Interface	USB Port	Extendable 2-CH RS232 & 2-CH RS485
	I/O Alarm Input	4-CH			I/O Alarm Input	4-CH
	I/O Alarm Output	1-CH			I/O Alarm Output	1-CH
	GPS	Optional			GPS	Optional
	3G/4G Network	3G WCDMA/4G LTE	E Optional		3G/4G Network	3G WCDMA/4G LTE Optional
Function	WIFI Network	Optional		Function	WIFI Network	Optional
	RJ45 Enternet Network	Optional			RJ45 Enternet Network	Optional
	Pre-Recording	0-15s			Pre-Recording	0-15s
	Post-Recording	15s-300s			Post-Recording	15s-300s
	G-sensor	Support			G-sensor	Support
	Upgrade Mode	Local Upgrade by US	SB/SD card		Lingrade Mode	Local Upgrade by USB/SD card
Others		Remote Upgrade by	3G/4G	Others		Remote Upgrade by 3G/4G
	Storage	Max 1x 2TB HDD +	2x 128GB SD Card		Storage	Max 1x 2TB HDD + 2x 128GB SD Card
		Max 2xSD Card(SD	Card MDVR)			Max 2xSD Card(SD Card MDVR)
	Voltage Input	DC8-36V			Voltage Input	DC8-36V
	Temperature	_20°C _ +70°C			Temperature	-20°C - +70°C
	Weight	2.35KG			Weight	2.35KG



SPACCIESSARIESN



HOBERCHERCHASTON





SPECTRON CASTINANATION





NOTE

IMPORTANT: For 1st Time HDD use, Please kindly format SD Card in MDVR at first.DISK=>HDD=>FORMAT

п	HDD					
🔜 нор	HDD					
Sectorage		Status	Capacity Total/Free	Format		
Con Storage		Recording	499.8G/495.2G			
	Overwi	rite by capacit	y T	Form	at	



After Start MDVR,See MDVR UI like the Picture below

ENLARGEMENT

Click Enlarge button, and Drag Mouse to select a special area to auto enlarge.



PLAYBACK

Step-01: Login MDVR Menu, User Name: admin, Password: Null (No Password)

LOGIN	
User name admin Password Random code ADVL036RD2E3E9HY	

Step-02: Login "Search"=>Setup Playback time & CHs=> Search Out Video files, Like the Picture belows:

		SEA	RCH			
🖣 Jan. 🕨 🖣 2019 🕨		СН	Start time	End time	Туре	Status
Su Mo Tu We Th Fr Sa		3	14:54:29	15:33:08	Normal	Unlock
30 31 1 2 3 4 5		6	14:54:29	15:33:07	Normal	Unlock
6 7 8 9 10 11 12		1	14:54:30	15:33:08	Normal	Unlock
13 14 15 16 17 18 19		2	14:54:30	15:33:16	Normal	Unlock
20 21 22 23 24 25 26		5	14:54:30	15:33:06	Normal	Unlock
27 28 29 30 31 1 2		7	14:54:30	15:33:08	Normal	Unlock
3456789		8	14:54:31	15:33:07	Normal	Unlock
Start time 00:00:00		3	15:38:12	15:51:37	Normal	Unlock
End time 23:59:59		5	15:38:12	15:51:38	Normal	Unlock
Record type All		6	15:38:12	15:51:38	Normal	Unlock
СН 2 2 1 2 2 3 2 4 2 2 5 2 6 2 7 2 8						
Search Backup Playback	First	Prev	Next	Last Bac	kup Lock	Unlock

Step-03: Check Video File=> Click "Playback"=>Choose the Playback CHs (Max 4-CH)=> Click "Playback"

f		SEAF	RCH			
✓ Feb. ▶ ◀ 201	9 🕨	СН	Start time	End time	Туре	Status
Su Mo Tu We Th Fr	sa 🔽	1	00:00:00	09:55:39	Normal	Unlock
27 28 29 30 31 1	2	3	00:00:00	09:55:39	Normal	Unlock
3 4 5 6 7	Selection				Normal	Unlock
10 11 12 13 14					Normal	Unlock
17 18 19 20 21 3		2 2 4			Normal	Unlock
24, 25 26 27 28		3 🗠 4			Normal	Unlock
3 4 5 6 7					Normal	Unlock
Start time 00:00:0					Normal	Unlock
End time 23:59:5	Remark:The ma	aximum	playback cha	annel is 4.		
Record type All		Cle	ar Playbac	k Exit		
CH	3 ☑ 4 7 ☑ 8					
Search Backup Pla	yback First	Prev	Next	Last Bac	kup Lock	Unlock



Step-01:Insert U-Disk or External HDD into MDVR Via USB Port



Step-02:Come into "Disk"=>USB Storage=> Format

		USB Stora	age	
нор	USB Storage			
and the second s	Status	Capacity Total/Free		
Storage USB Storage	Unformat	33.6G/33.6G	Format	Manage

Step03:"Search"=>Search Out Recorded videos

\uparrow		SEAF	RCH			
🖣 Jan. 🕨 🖣 2019 🕨		СН	Start time	End time	Туре	Status
Su Mo Tu We Th Fr Sa		3	14:54:29	15:33:08	Normal	Unlock
30 31 1 2 3 4 5		6	14:54:29	15:33:07	Normal	Unlock
6 7 8 9 10 11 12		1	14:54:30	15:33:08	Normal	Unlock
13 14 15 16 17 18 19		2	14:54:30	15:33:16	Normal	Unlock
20 21 22 23 24 25 26		5	14:54:30	15:33:06	Normal	Unlock
27 28 29 30 31 1 2		7	14:54:30	15:33:08	Normal	Unlock
3 4 5 6 7 8 9		8	14:54:31	15:33:07	Normal	Unlock
Start time 00:00:00		3	15:38:12	15:51:37	Normal	Unlock
End time 23:59:59		5	15:38:12	15:51:38	Normal	Unlock
Record type All		6	15:38:12	15:51:38	Normal	Unlock
CH 2 1 2 3 4 2 5 6 7 7 8						
Search Backup Playback	First	Prev	Next	Last Bac	kup Lock	Unlock

Step-01:Log in MDVR Menu,"Network"=>"Network"=>"Lan" To Setup The Segment of LAN IP to be The same as that of IPC

	Network	Note
IPC IPC COMM IPC IPC <td< th=""><th>LAN WIFI 3G/4G Obtain an IP address automatically Obtain an IP address automatically Outse the following IP address IP address IP address 1P address 1P address Subnet mask 255.255.255.000 Default gateway 192.168.001.001 Obtain DNS server address automatically Obtain DNS server address automatically Outse the following DNS server addresses Preferred DNS server 008.008.008 Alternate DNS server 202.096.134.133</th><th>You can use "Obtain an IP address automatically" or Setup a IP by manual. The More important is that the IP address of MDVR must have the same Segent as that of IPC Cam address. For Example, The IP address of IPC cam is 192.168.1.101, the Segment is 1, so the MDVR IPC also must be 1 Segment, I ike,xxx.xxx.1.xxx</th></td<>	LAN WIFI 3G/4G Obtain an IP address automatically Obtain an IP address automatically Outse the following IP address IP address IP address 1P address 1P address Subnet mask 255.255.255.000 Default gateway 192.168.001.001 Obtain DNS server address automatically Obtain DNS server address automatically Outse the following DNS server addresses Preferred DNS server 008.008.008 Alternate DNS server 202.096.134.133	You can use "Obtain an IP address automatically" or Setup a IP by manual. The More important is that the IP address of MDVR must have the same Segent as that of IPC Cam address. For Example, The IP address of IPC cam is 192.168.1.101, the Segment is 1, so the MDVR IPC also must be 1 Segment, I ike,xxx.xxx.1.xxx

Step-02: IPC Setup, Login MDVR Menu,"Network"=>"Network"=>"IPC" => "Enable"(Default)=> Click Search "

-
\sim
-

f		IP	°C	
品 Network	IPC Device			
 IPC Сомм P.T.Z Аlarm 	CH Enable 1 2 3 4 5	Device name	Ip&Port 192.168.1.240:8899 192.168.1.13:8899 192.168.1.15:8899 192.168.1.241:8899 192.168.1.241:8899	operate の () () () () () () () () () (
O CAPTURE			Default	: Apply

Step-03: 3th Step: After Search out the IPC Address, Check The IPC Adress=>"Ok"=> "Apply"=>done=> Video will show

□ 192.168.1.240 8899 ▼ ONVIF ▼ IPC □ 192.168.1.241 8899 ▼ ONVIF ▼ IPC □ 192.168.1.245 8899 ▼ ONVIF ▼ IPC □ 192.168.1.248 8899 ▼ ONVIF ▼ IPC □ 192.168.1.248 8899 ▼ ONVIF ▼ IPC □ 192.168.1.243 8899 ▼ ONVIF ▼ IPC □ 192.168.1.243 8899 ▼ ONVIF ▼ IPC
□ 192.168.1.241 8899 ▼ ONVIF ▼ IPC □ 192.168.1.245 8899 ▼ ONVIF ▼ IPC □ 192.168.1.248 8899 ▼ ONVIF ▼ IPC □ 192.168.1.248 8899 ▼ ONVIF ▼ IPC □ 192.168.1.243 8899 ▼ ONVIF ▼ IPC
□ 192.168.1.245 8899 ▼ ONVIF ▼ IPC □ 192.168.1.248 8899 ▼ ONVIF ▼ IPC □ 192.168.1.243 8899 ▼ ONVIF ▼ IPC □ 192.168.1.243 8899 ▼ ONVIF ▼ IPC
□ 192.168.1.248 8899 ▼ ONVIF ▼ IPC □ 192.168.1.243 8899 ▼ ONVIF ▼ IPC
□ 192.168.1.243 8899 ▼ ONVIF ▼ IPC
□ 192.168.1.246 8899 ▼ ONVIF ▼ IPC
□ 192.168.1.244 8899 ▼ ONVIF ▼ IPC
□ 192.168.1.247 8899 ▼ ONVIF ▼ IPC

ft	RECORD	
SYSTEM	Basic Bit rate Schedule	Always Mode
DATE/TIME DISPLAY	CH Enable Audio Mode 1 //	Schedule Mode
	Default Apply	

Step-01: Login MDVR GUI=>"Basic"=>"Record"=>Mode: Scheduel

Step-02: Come into "Scheduel"=> Setup "Alarm" Time in Red



Step-03: Come into "Advance"=>"Alarm"=>"Motion"=> Check Motion CHs and Sensitivity (1=Highest)

↑			Alarm		
品 Network	Motion	Sensor	Video loss	Others	
 @IPC	СН Е	nable Sensit	ivity Area	Schedule	Trigger
	1	2	Settings	Settings	Settings
A court	2	2	Settings	Settings	Settings
Сомм	3 🗖	2	Settings	Settings	Settings
	4	1(Hig	hest) 🖌 🛛 Settings	Settings	Settings
<u>ظ</u> Alarm	Сору СН	1 то	сн All 🖣	Сору	
O CAPTURE	_				
				Def	ault Apply

Step-04: Click Area "Settings" to Setup Motion Detection Area



Step-05: Click Trigger"Settings" to Setup Alarm linkage function

	Motion	Senso	or	Video	loss	Othe	ers
Record							
Snaps	not	1 2					
Send E	-MAIL						
Alarm	output						
Push							
Alarm	output duration	10s			-		
Buzzer		None			-		
Pop-up	screen	None			-		
Pre ree	ord	10s			-		
Post re	cord	30s			-		

DST Time Setup

Login MDVR Menu=>"Basic"=>"Date/Time"=>"DST" To Setup DST Time

\square		DATE/TIME	
SYSTEM DATE/TIME DISPLAY C RECORD Q USER	Date/Time Enable Mode Offset From To	DATE/TIME DST © Week O Date © One hour O Two hours Mar. 2nd Sun. 0 Nov. 1st Sun. 0	2:00:00 2:00:00
			Default Apply

Step-01:Login MDVR Menu=>"Basic"=>"RECORD"=>"BASIC" To Settle Channels & Audio Setup

\square			RECORD	
SYSTEM	Basic	Bit rate	Schedule	
DATE/TIME	<u>Сн</u> 1	Enable	Audio	Mode Always
DISPLAY	2			Always Always
ල්බී RECORD				Always 🚽
A USER	Сору СН	1 🕈 То	сн 📶 🕇 🕻	Гору
				Default Apply

Step-02: Login "Bit Rate"=>Setup Record Stream

$\mathbf{\pi}$			RECORD	
SYSTEM	Basic	Bit rate	Schedule	
-	СН	Resolution	Frame rate	Quality
DATE/TIME	1	1080P	20	🚽 Normal 📃 👻
-	2	720P	- 25	🚽 Good 🚽
DISPLAY	3	720P	- 14	🚽 Normal 🚽
	4	720P	▼ 14	👻 Normal 📃 👻
2 USER				
				Default Apply

Step-03: Login "Schedule"=>Setup Alarm Record & Manual Record Mode

f			R	ECORD			
SYSTEM	Basic	Bit rate	Sc	hedule			
DATE/TIME	сн	1	• Mar	nual O	Normal	• Alarm	
DISPLAY	0 Sun.	2, , 4, , ,	5, , 8, ,	,10, ,12,	14 10	5 18 20	22
၏ RECORD	Mon. Tue.						
A USER	Wed. Thu.						
	Sat.						
	Сору СН	1	То СН	All 👻	Сору		
						Default	Apply

DVA

Step-01:Login MDVR Menu=>"ADVANCE"=>"NETWORK"=>"WIFI"=>"Enable" to auto search out WIFI SSID=>Click the WIFI SSID=> Input Password=> Connect WIFI

↑			Network	¢	
品 Network	LAN	WIFI	3G/4G		
© IPC	WIFI		Enable		3
(сомм	ChinaNet-4T	Ge			
کے Alarm					
O CAPTURE					

Step-02:After WIFI Setup=>"3G/4G"=>"Switch: Enable"=>"Mode:Manual"=> Input "APN"=> "Access Number:*99#"

			Network	(
k	LAN	WIFI	3G/4G			
	switch		Enable		-	
	Mode		Auto		-	
	APN		CTNET			
	User nam	ne	card			
	Password	ł				
		umber	*99#			

Step-03: After Setup, "Net" Led On and Press "Info" Button to check network connection Status, If All success, the device already connected with Server and can login CMSV6 to see the live video.





If connect with Customer Server, Please kindly Login MDVR Menu=>"ADVANCE"=>"COMM"=>"CMS" To Change Server IP,Device ID and Port

		СОММ
ork	CMS E-MAIL	FTP
IM : n	CMS Device Id Center IP Center Domain Center Port	Enable - 800179 157.122.097.214 6608
TURE		
		Default Apply

Email Setup

Function Description: When Alarm Trigger, The MDVR will Auto Send Email to users

Step-01: Login MDVR Menu=>"ADVANCE"=>"COMM"=>"E-MAIL"=>"E-mail: Enable"=>Input Media Server(SMTP) => Port=> Connection Security: "None,SSL/TLS" Optional=> User Name: Sender's Email address=> Password: Sender's Email Password=> To: User's/Reciever's Email Address=>CC:Copy Email's Address

♠		сомм
品 Network	CMS E-MAIL	FTP
 IPC COMM P.T.Z Alarm CAPTURE 	E-MAIL Mail server(SMTP) Port Connection security User name Password To CC	Enable
	Sending interval	Immediately
NOTE After Setup the ir and verify all the	fo, Please kindly click "Test setup well.	" button to send a test alarm email to you

Step-02:Login MDVR Menu=>"ADVANCE"=>"ALARM"=>"Motion/Sensor/Video Loss/ Other" Alarm Setup=>"Trigger" =>Check "Email" Button.

2 3		Others	<u> </u>
2 3			
7			
10s			
None			
None			
105 30c			
			501
	Default O	K Exit	
			ofoul
		D	efault
	I Os None None 30s	None	None